

4200 Cable Management System (CMS) with AUIC

Application & Operation



TABLE OF CONTENTS

1. INTRODUCTION.....	1
1.1 4200 CMS SUMMARY.....	1
1.2 4200 CMS SPECIFICATIONS.....	2
2. HARDWARE COMPONENTS AND FUNCTION.....	3
2.1 4200 CMS CHASSIS.....	3
2.2 LINE INTERFACE CARD (LIC).....	4
2.3 ADVANCED USER INTERFACE CARD (AUIC).....	4
3. AUIC ACCESS AND SECURITY.....	8
3.1 AUIC ACCESS.....	8
3.2 AUIC SECURITY.....	9
4. INSTALLATION.....	11
4.1 RACK MOUNTING.....	11
4.2 TERMINAL BLOCK CONNECTIONS (NORTH AMERICAN VERSION).....	12
4.3 TERMINAL BLOCK CONNECTIONS (UK AND EUROPEAN VERSION).....	13
4.4 OTHER REAR PANEL CONNECTIONS.....	14
4.5 LIC CONFIGURATION.....	14
4.6 INSTALLATION AT CABLE VAULT OR CABLE ENTRY LOCATION.....	15
4.7 AUIC INSTALLATION.....	17
5. SYSTEM STARTUP/SHUTDOWN AND INITIAL CONFIGURATION.....	18
5.1 SYSTEM STARTUP/SHUTDOWN.....	18
5.2 INITIAL NETWORK CONFIGURATION.....	19
6. 4200 SYSTEM ACCESS.....	22
6.1 USER ACCESS PRIVILEGES.....	22
6.2 MODEM CONNECTION.....	22
6.3 SERIAL PORT CONNECTION.....	23
6.4 TELNET CONNECTION.....	24
7. CONFIGURING AN AUIC EQUIPPED 4200 CMS.....	25
7.1 SYSTEM CONFIGURATION.....	25
7.2 NETWORK CONFIGURATION.....	28
7.3 DATE/TIME CONFIGURATION.....	29
8. ALARM PROCESSING.....	31
8.1 ALARM TARGET CONFIGURATION.....	31
8.2 EVENT CONFIGURATION (PLUS VERSION).....	33
8.3 ALARM REPORTS.....	39
8.4 ALARM LOGS (PLUS VERSION).....	39
8.5 DRY ALARM CONTACTS.....	41
8.6 VIEWING ALARM STATUS.....	41
9. AUIC REPORTS (PLUS VERSION).....	43
9.1 STATUS REPORT.....	43
9.2 ACTIVE ALARM REPORT.....	44
9.3 ALARM HISTORY REPORT.....	45
9.4 LIST REPORT.....	46

10. LOCATE SCHEDULING (PLUS VERSION)	47
10.1 ACCESSING THE MENU	47
10.2 LOCATE SCHEDULING MENU.....	48
10.3 LINE SELECTION.....	49
10.4 DAY SELECTION	49
10.5 TIME SELECTION	50
10.6 DURATION SELECTION	50
11. SYSTEM ADMINISTRATION	51
11.1 SOFTWARE UPGRADES	51
11.2 SYSTEM BACKUP (PLUS VERSION)	54
11.3 SYSTEM RESTORE (PLUS VERSION).....	56
11.4 DIAGNOSTIC FUNCTIONS	57
12. TROUBLESHOOTING	59
12.1 POWER RELATED PROBLEMS.....	59
12.2 CMS NOT BOOTING UP.	59
12.3 INCORRECT SLOT INFORMATION	59
12.4 MODEM COMMUNICATION PROBLEMS.	59
12.5 SERIAL COMMUNICATION PROBLEMS.	60
12.6 NOT SENDING MODEM REPORTS	60
APPENDIX A	61
APPENDIX B	65
ABBREVIATIONS AND SPECIAL TERMS	72
CONTACT INFORMATION	74

List of Figures:

Figure 1: 4200 CMS Rear Panel..... 3

Figure 2: Rack Mounting 4200 CMS 11

Figure 3: LIC Current Limit Jumper Setting 14

Figure 4: Transmitter Protection Assembly at Cable Vault (Building Entry)..... 16

Figure 5: Boot-up Screen..... 18

Figure 6: Main AUIC Screen 18

Figure 7: Line Status Screen 18

Figure 8: Front Panel Menu 19

Figure 9: Power Off Message 19

Figure 10: Shutdown in progress..... 19

Figure 11: Shutdown Complete..... 19

Figure 12: System Config Menu..... 20

Figure 13: Network Config Menu 20

Figure 14: IP Address Configuration..... 20

Figure 15: Netmask Configuration 20

Figure 16: Default Gateway Configuration..... 21

Figure 17: DNS Server Configuration 21

Figure 18: Network Config Menu 21

Figure 19: 4200 CMS Main Menu 25

Figure 20: System Configuration Menu..... 26

Figure 21: Comms Configuration Menu..... 28

Figure 22: Date and Time Configuration Menu 29

Figure 23: Select Time Format 30

Figure 24: Select Date Format..... 30

Figure 25: Alarm Target Configuration Menu..... 31

Figure 26: Set Target Description 31

Figure 27: Add Alarm Target Menu..... 32

Figure 28: Simple Event Configuration Menu 33

Figure 29: Advanced Event Configuration Tree..... 34

Figure 30: Advanced Event Configuration Example 1 35

Figure 31: Advanced Event Configuration Example 2 35

Figure 32: Advanced Event Configuration Example 3 36

Figure 33: Advanced Event Configuration Menu 37

Figure 34: Expanded Event Configuration Menu 37

Figure 35: Edit Targets Menu..... 37

Figure 36: Add alarm targets Menu..... 38

Figure 37: Edit Targets Menu with Target 38

Figure 38: Event Configuration Menu with Targets 38

Figure 39: Standard Alarm Report 39

Figure 40: Short Form Alarm Report 39

Figure 41: Select Log file Menu..... 39

Figure 42: Alarm Log Menu..... 40

Figure 43: Viewing alarm logs..... 40

Figure 44: 4200 CMS Main Menu With Alarms 41

Figure 45: Line Control Menu With Alarms 42

Figure 46: Status Report 43

<i>Figure 47: Active Alarm Report.....</i>	<i>44</i>
<i>Figure 48: Alarm History Report.....</i>	<i>45</i>
<i>Figure 49: List Report.....</i>	<i>46</i>
<i>Figure 50: 4200 CMS Main Menu (Plus Version).....</i>	<i>47</i>
<i>Figure 51: Locate Scheduling Menu.....</i>	<i>48</i>
<i>Figure 52: Line Selection.....</i>	<i>49</i>
<i>Figure 53: Day Selection.....</i>	<i>49</i>
<i>Figure 54: Time Selection.....</i>	<i>50</i>
<i>Figure 55: Duration Selection.....</i>	<i>50</i>
<i>Figure 56: Diagnostic Menu.....</i>	<i>51</i>
<i>Figure 57: TeraTerm Send File Menu Option.....</i>	<i>52</i>
<i>Figure 58: FTP/HTTP upgrade.....</i>	<i>52</i>
<i>Figure 59: Card Upgrade Menu.....</i>	<i>53</i>
<i>Figure 60: Firmware Download.....</i>	<i>53</i>
<i>Figure 61: System Configuration Menu.....</i>	<i>54</i>
<i>Figure 62: Backup System Menu.....</i>	<i>54</i>
<i>Figure 63: Editing Scheduled Backups.....</i>	<i>54</i>
<i>Figure 64: Editing Backup Days.....</i>	<i>55</i>
<i>Figure 65: Editing the Backup Time.....</i>	<i>55</i>
<i>Figure 66: Perform Backup Menu.....</i>	<i>55</i>
<i>Figure 67: Restore System Menu.....</i>	<i>56</i>
<i>Figure 68: Restore via FTP Menu.....</i>	<i>57</i>
<i>Figure 69: Diagnostic Menu.....</i>	<i>58</i>
<i>Figure 70: Card Connect Menu.....</i>	<i>58</i>
<i>Figure 71: LIC Current Limit Jumper Setting.....</i>	<i>60</i>

List of Tables:

<i>Table A: TB1-Terminal Block Connections (North American version).....</i>	<i>12</i>
<i>Table B: TB1-Terminal Block Connections (UK & European version).....</i>	<i>13</i>
<i>Table C: Serial Port Pin-Out Description.....</i>	<i>14</i>
<i>Table D: LIC Monitor/Ground Jumper Block.....</i>	<i>15</i>

1. Introduction

1.1 4200 CMS Summary

The 4200 Cable Management System (CMS) is a full-featured cable monitoring system that continuously monitors the integrity of outside plant cable installations and provides early warning detection of any damage. The 4200 CMS is designed for use in smaller offices and long haul applications where a monitoring capacity for one or two cable routes of up to 78 miles or 125 kilometers each is required.

The entire system is housed in a rack mounted 3 1/2-inch high (2 units) chassis. The 4200 CMS has a modular design to accommodate a variety of plug in cards or modules. By selecting the card types or modules, the system can be tailored to specific requirements. Additional capacity or features can be added as needs change, via remote re-programmable firmware on all the installed cards.

The 4200 Alarm Circuit Unit (ACU) plug-in card will provide both armor and splice enclosure monitoring. The ACU can monitor up to 78 miles or 125 kilometers of cable armor and 799 sensor devices. The ACU employs Digital Signal Processing (DSP) circuitry that allows for adjustable filtering and for future enhancements to measurement and operation capabilities.

Operating over any metallic circuit, such as a metal armor or shield, the system will detect and warn the user of any damage to the protective cable jacket ensuring adequate preparation time for repair. By providing cathodic protection, the system protects the damage site, which inhibits corrosion of the armor until a repair can be carried out.

The 4200 Multi Tone Module (MTM) is a tone generating system that provides a wide range of tone frequencies to continuous outside plant cable installations, when below grade cable locating is required. The 4200 MTM is designed for use in offices where tone cable locating capabilities for one to four cable routes of up to 60 miles or 100 kilometers each is required (**actual distances can vary depending on cable armor/sheath condition**). Operating over any metallic circuit such as metal armor, shield or twisted copper pair the 4200 MTM will generate frequencies to match your hand held receiver units.

1.2 4200 CMS Specifications

Physical

Rack Mount	Center or flush
Width	19 inches
Height	3 ½ inches (2 Units)
Depth	12 inches
Operating Temperature	15° C to 30° C @ up to 90% relative humidity (Non-condensing)

Electrical

Input Voltage	-46 to -56 V dc
Max. Induced AC Voltage	16V rms
Max. Input Voltage on armor sheath	± 180 V dc
Dry Alarm contact	200 mA, 120 V ac or 110 V dc
Alarm contact state	Normally ~ OPEN, Alarm state ~ SHORTED
Electro Static Discharge ESD protected	

Communication

RS232 Serial Port:	Male DB-9 connector; 9,600 baud, no parity, 8 data bits, 1 stop bit
Modem:	Tip & Ring terminal block; 33.6 kbps
Ethernet:	Female RJ-45 connector; 10/100 Mbps
LCD Display & Keypad	40 character LCD Display 4 button keypad

2. Hardware Components and Function

The following section describes the standard components (Chassis, LIC and AUIC) that make up the 4200 CMS and explains their function. For details on the individual expansion components (ACU and MTM) please see the user manual for that component.

2.1 4200 CMS Chassis

The 4200 Chassis is a pre-wired chassis that can be mounted in a standard 19" or 23" rack. All active components except the MTM exist as plug-in cards so that the chassis does not need to be removed for the majority of servicing requirements.

The front panel of the 4200 chassis contains a 4x40 character LCD display that displays the status of the 4200 CMS.

The rear panel of the 4200 chassis holds the connections to the outside plant:

- Terminal Block to connect to the monitored cable shields, phone line, and dry alarm contact outputs
- 9 pin RS232 Serial Communications Port
- Main Power switch
- Chassis Ground connection



Figure 1: 4200 CMS Rear Panel

The chassis contains six available slots for the plug-in cards and internal mount brackets for module installations. The first two slots are dedicated to the Line Interface Card (LIC) and the Advanced User Interface Card (AUIC). The remaining four slots can be used for additional ACU cards (Figure 1). The MTM module is mounted within the 4200 CMS chassis.

2.2 Line Interface Card (LIC)

The Line Interface Card provides over-voltage protection and noise filtering to all Input/Output lines. These Input/Output lines include -48 V dc, Ground, four armor access lines (Line 1, 2, 3 and 4), CPS Anode Ground, phone line (Tip and Ring) and two dry alarm contacts (Equipment Alarm, Monitoring Alarm and Alarm Common). The dry alarm contacts can be configured to be normally open or normally closed in a non-alarm state.

The LIC card contains a circuit to provide loop current attenuation in the phone line for the instances where the 4200 CMS is installed in close proximity to the Telco switch. The LIC card is keyed and can only be installed in **slot 1** of the 4200 CMS chassis.

2.3 Advanced User Interface Card (AUIC)

The 4200 Advanced User Interface Card (AUIC) plugs into a 4200 shelf to provide a user interface to the 4200 monitoring hardware and control operation of the other cards. The AUIC software can be purchased as the Standard or Plus version depending on the requirements of the user. The following table highlights the different features that are available on the Standard or Plus versions of the AUIC.

Feature	AUIC Standard	AUIC Plus
Connectivity Options		
Keypad	✓	✓
Serial	✓	✓
Modem	✓	✓
Ethernet	✓	✓
Alarm Report Targets		
Audible	✓	✓
Dry alarm contacts	✓	✓
Modem	✓	✓
Numeric Pager	✓	✓
Email	✓	✓
Short Message Service (SMS)	✓	✓
SNMP Trap	✓	✓
Logfile		✓
Scheduled Reports		
Status Report		✓
Active Alarm Report		✓
Alarm History Report		✓
List Report		✓
Administrative		
System Description	✓	✓
Common Language Location (CLLI) Code	✓	✓
Date & Time Formatting	✓	✓
Backup & Restore		✓
Detailed alarm target configuration		✓
Sensor database	✓	✓
Database information included in reports		✓
IVR tone activation	✓	✓
IVR remote customization	✓	✓
Armor monitoring support	✓	✓
Tone locating support	✓	✓

2.3.1 Connectivity

The 4200 AUIC has four connectivity options that provide several different kinds of user interface:

1. RS-232 serial port
 - Interactive text terminal.
2. 33.6 Kbps Voice Modem
 - Interactive text terminal.
 - Interactive Voice Response (IVR) for control of tone location functions.
 - Text alarms and reports.
 - Pager alarms and reports
3. LCD/keypad
 - Allows control of tone location functions.
 - Used to “shut down” the system before power off.
 - Allows configuration of TCP/IP networking.
4. Ethernet port
 - Interactive text terminal via telnet.
 - Email alarms and reports.
 - Simple Network Management Protocol (SNMP) configuration and control.
 - Alarm reports sent via SNMP traps.

2.3.2 Alarm Reporting

The AUIC software employs an alarm subsystem that allows very detailed control of how events are reported to the user. Some of the features are:

1. Virtually unlimited number of email*, modem, pager and SNMP report targets.
2. Detailed alarm target configuration allowing individual line or sensor report targets (Plus version).
3. Alarm report logging (Plus version).

* Under normal conditions, message delivery should occur in seconds. However, due to inconsistencies of the Internet, message delivery can take longer and is not guaranteed.

2.3.3 Database

The AUIC has a database for sensor descriptions in both the Standard and Plus versions. This database will store user-defined descriptions for all sensors installed on a line. Exclusively with the Plus version, the AUIC will send a detailed report using the customized descriptions when an event occurs, such as an intrusion into a cabinet or moisture in a splice enclosure. This detailed report provides the user with the information required to rectify the situation quickly and efficiently.

2.3.4 Scheduled Reports (Plus version)

Another feature available with the Plus version is the ability to schedule reports. The user can program the AUIC to run reports on specific days and times and then send the reports to specific targets. The following four reports are available:

Status: The status report allows the user to display the status of the system. This report actually performs status tests (i.e. termination tests) to check the termination sensor on each line. Only sensors in alarm and/or termination sensors are displayed in a status report. If a tone is being applied, the status report will reflect this.

Active Alarms: The active alarm report displays a report that lists any alarms currently detected by the system. This report includes alarms for the various cards supported by the AUIC (ACU and MTM). This “scheduled alarm” report can be distinguished from an actual “unscheduled alarm” report by the report header.

Alarm History: The alarm history report displays the alarm history for the entire system. Since all alarms are captured to non-volatile memory, they are available even if the system power is cycled.

List: The list command allows the user to list all system information.

2.3.5 Administration Features

Both the Standard and Plus versions of the AUIC have a date and time configuration that allows various date and time formats. There are also additional fields provided for Common Language Location (CLLI) Codes and location information. With the Plus version there is also the capability of managing log files.

The Plus version of the AUIC has the capability for a complete system backup and restore. The system can be backed up via email, FTP or modem file transfer. Backups can be performed manually or can be scheduled to run automatically.

3. AUIC Access and Security

3.1 AUIC Access

When logging on to the 4200 CMS with AUIC via modem or Telnet, the user is prompted for a login name and password. Currently the login name is not used for system access, it has been included for future enhancements. Press **enter** when prompted for a login name and the password prompt will appear. The password entered at login will determine the access level granted to the user. The three levels of access are:

1. **Operator** - allows a user to activate and view all monitoring and tone locating services. Default password is <blank>.
2. **Administrator** - allows a user to activate, view and configure all monitoring and tone locating services. Default password is **administrator**.
3. **Diagnostic** - allows a user full access to the AUIC functions including software upgrades, specific card information and security options. Use caution when assigning diagnostic access to users. Configuration damage can occur if incorrect actions are taken in diagnostic mode. Default password is **diagnostic**.

To prevent unauthorized access to the 4200 CMS the default passwords should be changed as soon as possible. To change the login passwords see section 7.1 – System Configuration.

When a user connects to the 4200 CMS using a serial connection, diagnostic access is automatically granted.

The following table summarizes the functions available with each of the three levels of user access.

Function	Operator	Administrator	Diagnostic
Locate Tone			
View Locate Tone Status	•	•	•
Activate Locate Tone	•	•	•
Select Locate Tone Frequency	•	•	•
Configure Locate Tone Frequencies		•	•
Configure Locate Tone Settings		•	•
Armor Monitoring			
View Armor Monitoring Status	•	•	•
Activate Armor Monitoring	•	•	•
Execute Status Test	•	•	•
Initialize Outside Plant Line		•	•
Configure Armor Monitoring Settings		•	•
AUIC Configuration			
AUIC System Configuration		•	•
AUIC Network Configuration		•	•
Date & Time Configuration		•	•
Enable Data Modem Connection			•
Enable Telnet Connection			•
AUIC Software Upgrade			•
Expansion Card Firmware Upgrade			•
Card Connect			•
Remote Reboot of AUIC			•

3.2 AUIC Security

When the AUIC is connected to a local area network, some security precautions should be observed. Be sure to discuss network security concerns with the network administrator before installing the AUIC.

First, select good passwords for the operator, administrator and diagnostic access levels. A good password should consist of at least eight characters, and be a combination of letters and numbers. Avoid using words or names as passwords. Limit the administrator access to users that will perform configuration tasks, and diagnostic access to users that will perform configuration tasks and software upgrades.

Data modem connections can be disabled on the AUIC for those systems installed on a local area network. Allowing data modem connections on an AUIC installed on a local area network can compromise network security if the logon passwords are available. To maximize network security, disable data modem connection in the comms config menu (see Section 7.2). When the data modem connection is disabled, modem connections to the AUIC will not be allowed, but tone activation via Interactive Voice Response will still be available. Data modem connections are disabled by default from the factory.

Telnet access to the AUIC can be disabled on the AUIC to prohibit system access via the Ethernet network. To maximize network security, disable the Telnet connection in the

comms config menu (see Section 7.2) or using the front keypad (see Section 5.2). When the Telnet connection is disabled, the Telnet terminal connection to the AUIC will be unavailable; all other Ethernet based services such as SNMP and email will still be available. Telnet connections are disabled by default from the factory.

4. Installation

This section describes the typical installation of the Norscan 4200 CMS in an Office Equipment environment. The installation method can be modified to suit individual requirements. For specific connection details for armor monitoring, tone locating or optical monitoring please refer to the corresponding user manual.

4.1 Rack Mounting

The 4200 CMS can be flush or center mounted in a standard 19" (483 mm) or 23" (585 mm) relay rack and comes equipped with convertible mounting brackets. The 4200 CMS is two units or 3.5" (89mm) high, 19" (483 mm) wide, and 12" (305 mm) deep (Figure 2).

Note: When the MTM module is installed in a 4200 CMS chassis, at least one inch of clearance above and below the chassis is required for heat venting and dissipation purposes.

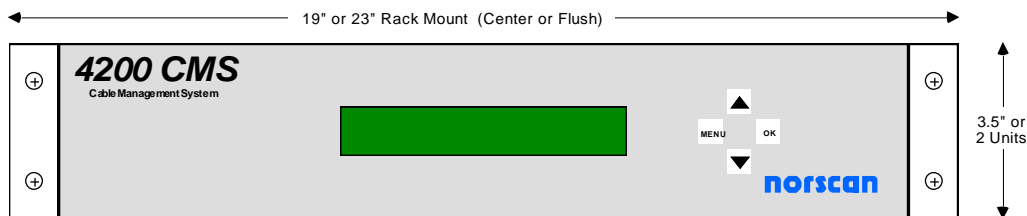


Figure 2: Rack Mounting 4200 CMS

The 4200 CMS equipment is designed for installation in a controlled office environment. This may include buildings or environmentally controlled cabinet housings or remote switching stations. Contact Norscan for details on installation in remote buildings or cabinets.

Warning!

Potential for electrical shock exists when handling cables while the Alarm Circuit Unit (ACU) card is activated or the Multi Tone Module (MTM) is transmitting tone frequencies. Make sure that the ACU card is set to OFF and that the MTM is not transmitting tone on the cable that is being handling at that particular time. Always take DC and AC measurements using a Norscan 1303 System Test Set or a Multi-meter to determine what AC or DC voltages are present before handling the cable. Note: Induced AC and transient voltages can also be present on the cable armor. Temporarily hard ground the cable armor before handling the cable in the central office, outside plant splice or remote termination location. Once the work is completed, remove the hard ground connection to the cable armor. Remove the cable armor connection first and then the local ground connection.

4.2 Terminal Block Connections (North American version)

Connect all wires carefully to the terminal block according to your cable system network. A description of each connection is explained in Table A.

POSITION	FUNCTION	DESCRIPTION
TB1-1	-48 Vdc	Central office battery voltage connection to -48 Vdc supply. Use a minimum 16 American Wire Gauge (AWG) wire. Must be fused at 5 amps.
TB1-2	GND	Earth or Station ground connection. Use a minimum 16 American Wire Gauge (AWG) wire. Note: Not to be confused with CPS Anode GND.
TB1-3	LINE 1	Input connection line for ACU armor monitoring or MTM tone access line. Use a minimum 24 AWG wire. Warning: Must be connected to a Transmitter Protection Assembly unit at the cable vault area (see Section 4.6).
TB1-4	LINE 2	Input connection line for ACU armor monitoring or MTM tone access line. Use a minimum 24 AWG wire. Warning: Must be connected to a Transmitter Protection Assembly unit at the cable vault area (see Section 4.6).
TB1-5	LINE 3	Input connection line for ACU armor monitoring or MTM tone access line. Use a minimum 24 AWG wire. Warning: Must be connected to a Transmitter Protection Assembly unit at the cable vault area. (see Section 4.6).
TB1-6	LINE 4	Input connection line for ACU armor monitoring or MTM tone access line. Use a minimum 24 AWG wire. Warning: Must be connected to a Transmitter Protection Assembly unit at the cable vault area (see Section 4.6).
TB1-7	CPS ANODE GND	Cathodic protection sacrificial Anode Ground connection. Use a minimum 10 AWG wire to connect Anode Ground to this terminal. Note: Not to be confused with GND.
TB1-8	EQUIPMENT ALARM	Output for an external supervisory alarm system. Use a minimum 24 AWG wire. Relay is in normally open state by default.
TB1-9	ALARM COMMON	Common connection for an external supervisory alarm system. Use a minimum 24 AWG wire.
TB1-10	MONITORING ALARM	Output for an external supervisory alarm system. Use a minimum 24 AWG wire. Relay is in normally open state by default.
TB1-11	PHONE TIP	Input connection phone tip line for using modem communication. Use a minimum 24 AWG wire.
TB1-12	PHONE RING	Input connection phone ring line for using modem communication. Use a minimum 24 AWG wire.

Table A: TB1-Terminal Block Connections (North American version)

4.3 Terminal Block Connections (UK and European version)

Connect all wires carefully to the terminal block according to your cable system network. A description of each connection is explained in Table B.

POSITION	FUNCTION	DESCRIPTION
TB1-1	-48 Vdc	Central office battery voltage connection to -48 Vdc supply. Use a minimum 16 American Wire Gauge (AWG) wire. Must be fused at 5 amps.
TB1-2	GND	Earth or Station ground connection. Use a minimum 16 American Wire Gauge (AWG) wire. Note: Not to be confused with CPS Anode GND.
TB1-3	LINE 1	Input connection line for ACU armor monitoring or MTM tone access line. Use a minimum 16 AWG shielded twisted pair wire (typical length 10 meters). Warning: Must be connected to a LPU and IVF at the cable vault.
TB1-4	LINE 2	Input connection line for ACU armor monitoring or MTM tone access line. Use a minimum 16 AWG shielded twisted pair wire (typical length 10 meters). Warning: Must be connected to a LPU and IVF at the cable vault.
TB1-5	LINE 3	Input connection line for ACU armor monitoring or MTM tone access line. Use a minimum 16 AWG shielded twisted pair wire (typical length 10 meters). Warning: Must be connected to a LPU and IVF at the cable vault.
TB1-6	LINE 4	Input connection line for ACU armor monitoring or MTM tone access line. Use a minimum 16 AWG shielded twisted pair wire (typical length 10 meters). Warning: Must be connected to a LPU and IVF at the cable vault.
TB1-7	CPS ANODE GND	Cathodic protection sacrificial Anode Ground connection. Use a minimum 10 AWG wire to connect Anode Ground to this terminal. Note: Not to be confused with GND.
TB1-8	EQUIPMENT ALARM	Output connection for an external supervisory alarm system. Use a minimum 24 AWG wire. (Relay switch is normally in OPEN state)
TB1-9	ALARM COMMON	Common connection for an external supervisory alarm system. Use a minimum 24 AWG wire.
TB1-10	MONITORING ALARM	Output connection for an external supervisory alarm system. Use a minimum 24 AWG wire. (Relay switch is normally in OPEN state)
TB1-11	PHONE TIP	Input connection phone tip line for using modem communication. Use a minimum 24 AWG shielded twisted pair wire (typical length 1.5 meters).
TB1-12	PHONE RING	Input connection phone ring line for using modem communication. Use a minimum 24 AWG shielded twisted pair wire (typical length 1.5 meters).

Table B: TB1-Terminal Block Connections (UK & European version)

4.4 Other Rear Panel Connections

- **RS-232** - Serial port connection (9 pin) for direct connection communication.

Pin Number	DESCRIPTION
2 (RX)	Received Data
3 (TX)	Transmitted Data
4 (DSR)	Data Set Ready
5 (GND)	Ground (Signal Common)
6 (DTR)	Data Terminal Ready

Table C: Serial Port Pin-Out Description

- **GND** - Chassis ground. Used for grounding the chassis when the 4200 CMS is not installed in a rack. **Note: Chassis must be grounded.**

4.5 LIC Configuration

The LIC can be used to change the attenuation of the phone line in cases where the 4200 CMS is located too close to the Telco switch. Jumpers J6 – J9 are used to select the amount of attenuation. The default setting is 150Ω (Figure 3).

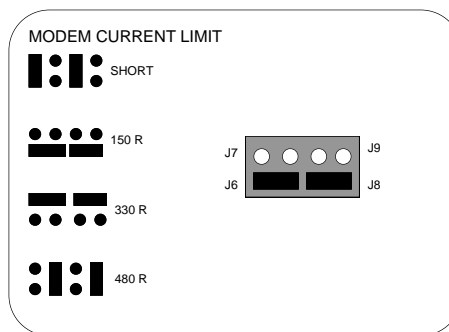


Figure 3: LIC Current Limit Jumper Setting

If the 4200 CMS is used for toning only (ACU cable monitoring is not used), the user has the option to ground the lines when the MTM module is not active. The user can set the jumper pins according to their cable network by matching the setting as indicated, see Table D: LIC Monitor/Ground Jumper Block.

POSITION	Line Affected	DESCRIPTION
GND and J12	LINE 1	The cable network that is connected to Line 1 of TB1 is grounded after the MTM module has stopped tone generation to this line.
J12 and 1	LINE 1	The cable network that is connected to Line 1 of TB1 will resume ACU cable monitoring after the MTM module has stopped tone generation to this line.
GND and J13	LINE 2	The cable network that is connected to Line 2 of TB1 is grounded after the MTM module has stopped tone generation to this line.
J13 and 2	LINE 2	The cable network that is connected to Line 2 of TB1 will resume ACU cable monitoring after the MTM module has stopped tone generation to this line.
GND and J14	LINE 3	The cable network that is connected to Line 3 of TB1 is grounded after the MTM module has stopped tone generation to this line.
J13 and 3	LINE 3	The cable network that is connected to Line 3 of TB1 will resume ACU or CPS cable monitoring after the MTM module has stopped tone generation to this line.
GND and J15	LINE 4	The cable network that is connected to Line 4 of TB1 is grounded after the MTM module has stopped tone generation to this line.
J13 and 4	LINE 4	The cable network that is connected to Line 4 of TB1 will resume ACU or CPS cable monitoring after the MTM module has stopped tone generation to this line.

Table D: LIC Monitor/Ground Jumper Block

4.6 Installation at Cable Vault or Cable Entry Location

Installation of a 51200 Transmitter Protection Assembly (includes two Induced Voltage Filters (IVF) and two TI355 Gas Tubes) is recommended at the Cable Vault or Building Entry Location. Installing these devices prevents the potential for stray voltage surges or induced AC voltages from causing serious harm to personnel, equipment and the cable itself. **Note: This applies all 4200 CMS systems that are using ACU cards or MTM modules.**

Mount the 51200 Transmitter Protection Assembly to a wall in close proximity to the cable vault area. Connect the cable armors from the outside plant to the appropriate connection terminals (East/North, West/South) as they are labeled on the front cover of the 51200. Using a feeder cable (usually 22 gauge, 4 wire, twisted pair shielded cable), connect the 4200 CMS line 1, 2, 3 or 4 to the L1 or L2 terminal block (one line per terminal block, Line 1 to L1, Line 2 to L2) in the Transmitter Protection Assembly. When using twisted pair wire, make sure that one wire of the pair is to L1 or L2 and the other wire of the pair is to GND of the terminal block. Ground the entire Transmitter Protection Assembly by connecting the Ground/Earth terminal to Building Ground. See Figure 4

Model 51200 - TRANSMITTER PROTECTION ASSEMBLY

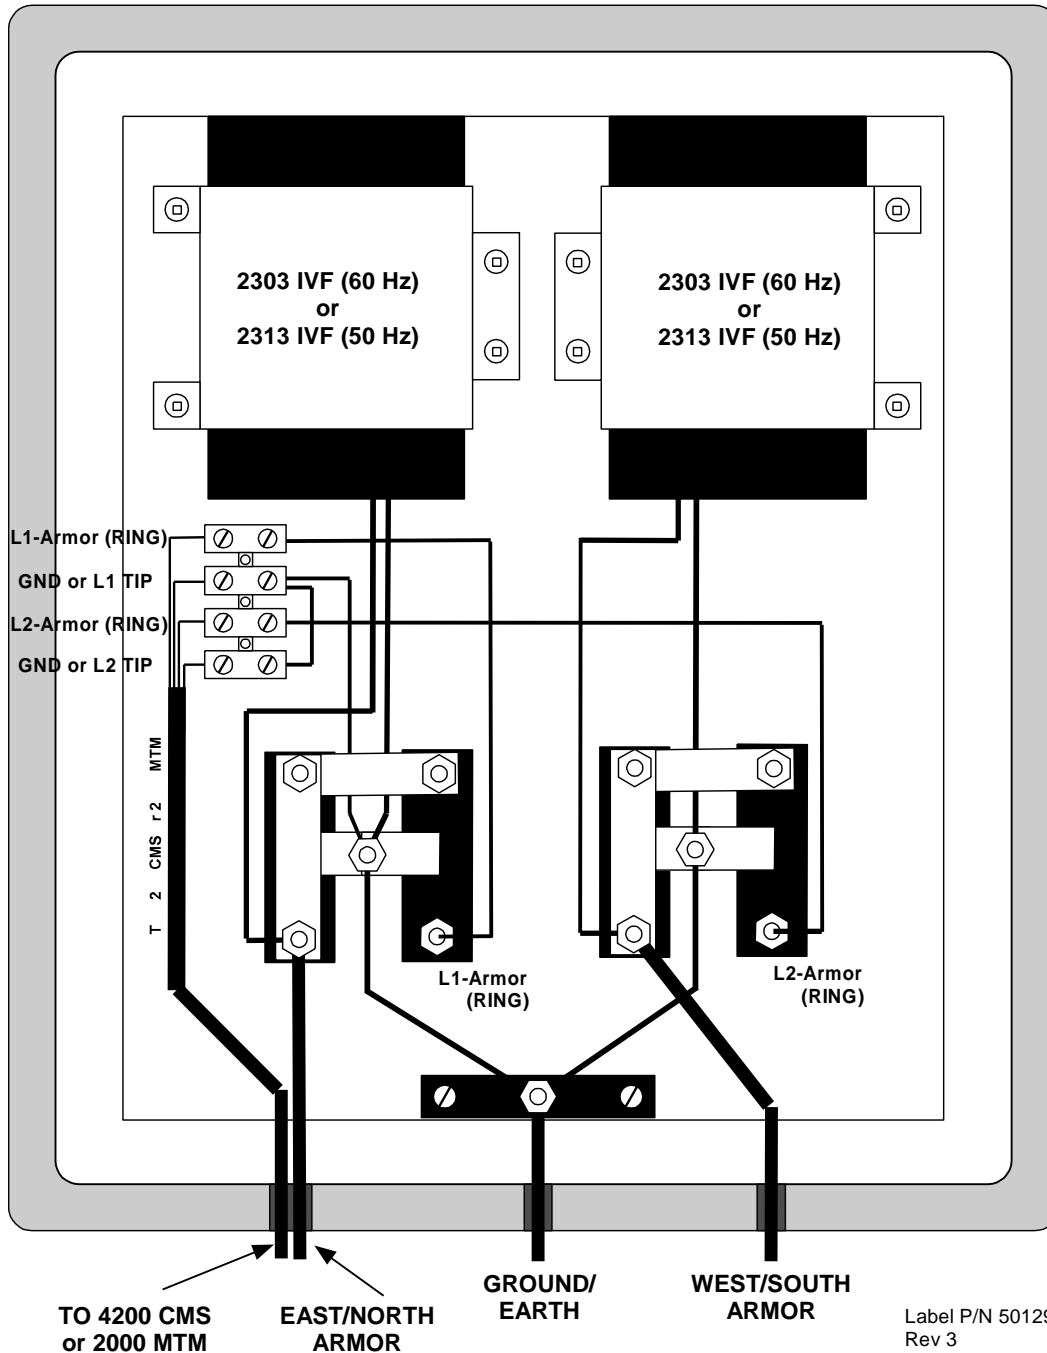


Figure 4: Transmitter Protection Assembly at Cable Vault (Building Entry)

4.7 AUIC Installation

This section describes the typical installation of the Norscan 4200 AUIC in a 4200 Cable Management System (CMS). This will only be necessary when upgrading a UIC equipped 4200 CMS to an AUIC; new systems ordered with an AUIC will have the AUIC installed at the factory.

When using the AUIC in a 4200 system, other expansion cards (ACU and MTM) may require a firmware upgrade to be compatible with the AUIC. Compatible firmware versions for each expansion card are included with the AUIC software. You will want to upgrade the ACU and MTM firmware as soon as possible to provide full functionality between the AUIC and the expansion cards.

Warning! ESD sensitive device, use static straps and insure proper grounding when handling circuit boards.

Unpack and check the 4200 AUIC for any shipping damage. If there is any indication of shipping damage, please contact Norscan immediately.

When upgrading a 4200 CMS from a UIC to an AUIC, turn **off** the power on the master shelf. Carefully remove the old UIC card from slot 2 and store it in an anti-static container or bag. Carefully insert the new AUIC in slot 2. The AUIC is designed for installation in slot 2 only. Installation in any other slot will not allow the AUIC to connect to the 4200 CMS. Push the card into the slot until you can feel it set into the edge card connector in the back plane of the 4200. Once the card is inserted properly, install the AUIC capable back panel.

If the 4200 CMS is to be connected to an Ethernet network, connect an RJ45 patch cable from the Ethernet port on the back of the AUIC to a hub or switch on the network.

The card should now be properly in place and you may power on the Master Shelf.

5. System Startup/Shutdown and Initial Configuration

This section describes the system startup and shutdown procedures along with the initial system configuration of the AUIC. A 4200 CMS that is equipped with an AUIC allows configuration of the TCP/IP settings using the front keypad or by connecting via modem or serial cable.

5.1 System Startup/Shutdown

After the 4200 CMS is wired correctly (Section 4), and the AUIC is installed, turn on the Power Switch of the 4200 CMS. The 4200 CMS display will show a welcome message (Figure 5) indicating the AUIC is in the boot-up process.

```
*****  
*           Welcome to the 4200 AUIC           *  
*                   System Booting                   *  
*****
```

Figure 5: Boot-up Screen

When the 4200 AUIC has finished the boot-up process (after approximately 1min 45sec) the 4200 CMS will show the main AUIC screen (Figure 6).

```
Norscan 4200 - unnamed 4200  
Ver: 3.0+ (14080)  
Serial: 1234567890  
Press MENU to issue commands
```

Figure 6: Main AUIC Screen

If the firmware in the other cards has been upgraded to version 3.00 or greater, the 4200 CMS screen will alternately display the main AUIC screen and the line status screen for each OSP line connected to a service. A typical line status screen for the armor monitoring service is shown in Figure 7. To stop the display from alternating between screens, press OK on the front panel. When the display is stopped, use the arrow keys to change between the main AUIC screen and the Line status screens.

```
Line 1: Default Description  
Sensor: Standard no alarms  
Armor: ON 0.00mA >150kR no alarms
```

Figure 7: Line Status Screen

Note: R represents resistance in Ohms

When the 4200 CMS needs to be powered down, the AUIC must be shutdown properly to prevent file corruption and the loss of data. To prepare the system for shutdown press the menu key on the 4200 CMS front panel, the front panel menu will appear (Figure 8).


```
->Tone Control
Power Off System
Back
```

Figure 8: Front Panel Menu

Use the arrow keys to select **Power Off System** and press **OK**. A message will appear to confirm the power down cycle (Figure 9).

```
Are you sure you want to
power off the system?
->Yes
No
```

Figure 9: Power Off Message

Select **Yes** and press **OK** to power off the system or select **No** and press **OK** to resume normal operation. If yes is selected, the shutdown process will begin (Figure 10).

```
Shutdown in progress,
Please wait
```

Figure 10: Shutdown in progress

When the following message appears, the shutdown process is complete and it is safe to power off the system (Figure 11).

```
It is now safe to
power off the system
```

Figure 11: Shutdown Complete

5.2 Initial Network Configuration

After the 4200 CMS with the AUIC has completed the boot-up process, network configuration can take place. The following network settings can be configured using the front panel:

- System IP Address
- Netmask
- Gateway
- DNS server
- Telnet enabled or disabled

To configure the network settings using a modem or serial connection see Section 7.2 - Network Configuration.

To configure the network settings using the front panel, access the system configuration menu by using the following key sequence:

1. Press and hold the **UP** arrow.
2. Press and release **MENU**.
3. Release the **UP** arrow.

The system config menu will appear (Figure 12).

```
Reset Passwords
->Network Config
Back
```

Figure 12: System Config Menu

Next, select **Network Config** and press **OK**. The Network Config menu will appear (Figure 13). All the settings in the Network Config menu must be set to the values assigned to the 4200 CMS by the network administrator.

```
->Address 10.1.1.74
Netmask 255.255.255.0
Gateway 10.1.1.6
DNS 10.1.1.1
```

Figure 13: Network Config Menu

To change the value for the IP Address, select Address from the Network Config Menu and press **OK**. The IP Address configuration screen will appear (Figure 14). Use the arrow keys to increase or decrease the value. Press **OK** to advance to the next number. Press **OK** on the last number to save the new settings.

```
IP Address
Use arrows to set address
10_.1_.1_.74_
Press OK to advance
```

Figure 14: IP Address Configuration

To change the value for the Netmask, select **Netmask** from the Network Config Menu and press **OK**. The Netmask configuration screen will appear (Figure 15). Use the arrow keys to select one of the 32 possible Netmask values and press **OK** to save the new settings.

```
Use arrows to set netmask
255.255.255.0_
Press OK when done
```

Figure 15: Netmask Configuration

To change the value for the Default Gateway, select **Gateway** from the Network Config Menu and press **OK**. The Default Gateway configuration screen will appear (Figure 16). Use the arrow keys to increase or decrease the value. Press **OK** to advance to the next number. Press **OK** on the **last number** to save the new settings.

```
Default Gateway
Use arrows to set address
 10_.1_.1_.6_
Press OK to advance
```

Figure 16: Default Gateway Configuration

To change the value for the DNS Server, select **DNS** from the Network Config Menu and press **OK**. The DNS Server configuration screen will appear (Figure 17). Use the arrow keys to increase or decrease the value. Press **OK** to advance to the next number. Press **OK** on the **last number** to save the new settings.

```
DNS Server
Use arrows to set address
 10_.1_.1_.254
Press OK to advance
```

Figure 17: DNS Server Configuration

To enable or disable Telnet, arrow down to select **Telnet** from the Network Config Menu and press **OK**. The Telnet setting will toggle between Off and On.

```
Netmask 255.255.255.0
Gateway 10.1.1.6
DNS      10.1.1.1
->Telnet Off
```

Figure 18: Network Config Menu

When all the Network settings are correct select **Back** from the Network Config Menu and press **OK** to return to the previous menu.

If changes were made to the network settings, the AUIC will shut down the networking and restart the networking with the modified settings.

To return to the main AUIC screen, select **Back** from the system config menu and press **OK**. This completes the TCP/IP configuration of the AUIC.

6. 4200 System Access

6.1 User Access Privileges

When logging on to the AUIC there are three levels of user access. The access level is determined by the password entered at login. For details on permissions for each level of user access see Section 3 - AUIC Access and Security.

- **Operator** - allows a user to activate and view all line monitoring and tone locating information.
- **Administrator** - allows a user to activate, view and configure all line monitoring and tone locating information.
- **Diagnostic** - allows a user full access to the AUIC functions including software upgrades. Use caution when assigning diagnostic access to users. Configuration damage can occur if incorrect actions are taken in diagnostic mode.

6.2 Modem Connection

Logging onto the 4200 CMS over the built-in modem requires a terminal or a personal computer (PC) equipped with a terminal communications software package. The package should support ANSI terminal emulation. If ANSI emulation is not available, use VT100 mode. Some cursor movements and other features may not be supported by VT100 mode.

The following procedure describes how to log onto the 4200 CMS using a modem. This procedure assumes that the user is familiar with computer communication software. If the user is not familiar with computer communication software, they should refer to their communication software manual.

1. Set your terminal software to ANSI emulation.
2. Set the terminal to 57,600 baud, full duplex, hardware handshaking on, echo off, no parity, 8 data bits and 1 stop bit (N81).
3. Set the modem time out to 60 seconds, either in the setup menu or by sending the command `ATS7=60` to the modem.
4. Save this setup if possible.
5. Follow the terminal software's instructions to dial the 4200 CMS phone number.
6. After the 4200 CMS answers, there will be a 30 to 60 second delay to allow for the Interactive Voice Response (IVR) sequence to cycle through. Once complete,

the login screen will appear prompting you for a login name. Currently the login name is not used for system access, it has been included for future enhancements. Press **enter** when prompted for a login name.

7. Next, the AUIC will prompt the user for a password. The entered password will determine the access available to the user. The default passwords are:
 1. Operator password – <blank>
 2. Administrator password – administrator
 3. Diagnostic password – diagnostic

Note: Use caution when assigning diagnostic access to users. Configuration damage can occur if incorrect actions are taken in diagnostic mode.

8. Type in a password and press the enter key to access the main menu.

6.3 Serial Port Connection

A personal computer (PC) equipped with a terminal communication software package that supports the ANSI terminal emulation is required. The user can directly connect to the 4200 CMS through the RS232 serial port on the rear panel of 4200 CMS.

The following procedure describes how to log onto the 4200 CMS using the RS232 serial port direct connection. This procedure assumes that the user is familiar with computer communication software. If the user is not familiar with computer communication software, they should refer to their communication software manual.

1. If you are using a PC, a 9 pin female-to-female serial cable is required to connect to the 4200 CMS.
2. Attach the serial cable between the RS232 port and the serial port on the PC.
3. Set the terminal BAUD RATE to 9600 baud.
4. Set the data format to full duplex, handshaking off, echo off, no parity, 8 data bits and 1 stop bit (N81).
5. Press the ENTER key to log on.

Note: When logging on to the 4200 CMS via the serial port, diagnostic access is automatically granted.

6.4 Telnet Connection

A personal computer (PC) equipped with a telnet communication package is required. The user can connect to the 4200 CMS through the TCP/IP network after the AUIC network settings have been configured and Telnet access has been enabled (see section 5.2 Initial Network Configuration).

The following procedure describes how to log onto the 4200 CMS using telnet. This procedure assumes that the user is familiar with telnet software. If the user is not familiar with telnet software, they should refer to their telnet software manual.

1. Start the telnet software
2. Enter the IP address that has been assigned to the 4200 CMS into the telnet software.
3. Establish a connection to the 4200 CMS.
4. The login screen will appear prompting you for a login name. Currently the login name is not used for system access, it has been included for future enhancements. Press **enter** when prompted for a login name.
5. Next, the AUIC will prompt the user for a password. The entered password will determine the access available to the user. The default passwords are:
 1. Operator password – (blank)
 2. Administrator password – administrator
 3. Diagnostic password – diagnostic

Note: Use caution when assigning diagnostic access to users. Configuration damage can occur if incorrect actions are taken in diagnostic mode.

6. Type in a password and press enter to access the main menu.

7. Configuring an AUIC Equipped 4200 CMS

This user manual is based on a 4200 CMS equipped with two ACU cards and a MTM module. The optional cards included in the system can be modified to suit your system monitoring network requirements.

When the 4200 CMS is installed and all the Input/Output connections are secured, you can power up the 4200 CMS unit.

You must log onto the 4200 CMS in order to configure it for the first time or change values according to your monitoring network specifications. (See section 6 - 4200 System Access)

When you have logged onto the 4200 CMS, the main system menu is displayed. The main system menu for the diagnostic login of the plus version is shown in Figure 19. The menu options will vary based on the access granted at user login and the hardware components in the 4200 system.

```

                                Main Menu
->Line 1. Default Description - no cards connected
   Line 2. Default Description - no cards connected
   Line 3. Default Description - no cards connected
   Line 4. Default Description - no cards connected

System Configuration
Comms Configuration
Date/Time Configuration
Tone Frequency Configuration
Alarm Target Configuration
Event Configuration
Report Scheduling
Alarm Logs
Diagnostics

Quit
```

Figure 19: 4200 CMS Main Menu

7.1 System Configuration

The System Configuration Menu allows the user to view and configure the system description and the system passwords (Administrator or Diagnostic login only).

To configure the System Settings, highlight the **System Configuration** option from the 4200 Cable Monitoring System Main Menu and press **enter**. The System Configuration menu will appear (Figure 20). Use the **Up** and **Down Arrow** keys to move between menu items.

System Config	
System Description	unnamed 4200
Location	unknown location
CLLI Code	
Operator Password	
Administrator Password	administrator
Diagnostic Password	diagnostic
IVR Password	
SNMP Read-Only Community String	public
SNMP Read/Write Community String	system
Audible Alarms	()
Report Cleared Alarms	(x)
Report Tone Alarms	(x)
Use Graphical Characters	()
<Backup System> <Restore System>	
<OK> <CANCEL>	

Figure 20: System Configuration Menu

System Description: Enter the description of the 4200 CMS to uniquely identify the unit and press **enter**. This field will be used in alarm reports to identify the 4200 system that is sending the report.

Location: Enter a location description for the 4200 CMS and press **enter**. This field will be used in alarm reports to indicate a location for the 4200 system that is sending the report

CLLI Code: Enter a CLLI Code for the 4200 CMS and press **enter**. The CLLI (Common Language Location) Code is used as a standardized geographic identifier that uniquely identifies the geographic location and certain functional categories of the 4200 system.

Operator Password: Enter a password for operator access to the AUIC and press **enter**. Operator access allows a user to activate and view all line monitoring and tone locating information. Leave blank for no password. Default is <blank>.

Administrator Password: (Administrator or Diagnostic login only) Enter a password for administrator access to the AUIC and press **enter**. Administrator access allows a user to activate, view and configure all line monitoring and tone locating information. Leave blank for no password. Default is *administrator*.

Diagnostic Password: (Diagnostic login only) Enter a password for diagnostic access to the AUIC and press **enter**. Diagnostic access allows a user full access to the AUIC functions including software upgrades and the command shell prompt. Use caution when assigning diagnostic access to users. Configuration damage can occur if incorrect actions are taken in diagnostic mode. Leave blank for no password. Default is *diagnostic*.

Note: If the diagnostic password has been forgotten, the password can be changed through a serial port connection or all the passwords can be reset using the front panel. Using the front panel press and hold the up arrow then press MENU then OK to access the system config menu. Select reset passwords and press OK.

IVR Password: Enter a password for Interactive Voice Response (IVR) and press **enter**. Must be four digits. Leave blank for no password. Default is <blank>.

SNMP Read-Only Community String: Enter the SNMP Read-Only Community String and press **enter**. Default is *public*.

SNMP Read/Write Community String: Enter the SNMP Read/Write Community String and press **enter**. Default is *system*.

Audible Alarms: Press **enter** to enable or disable the audible alarm. The audible alarm is enabled when an 'x' is shown. Default is disabled.

Report Cleared Alarms: Press **enter** to select or deselect this option. If this option is selected (indicated by an 'x'), reports will be sent to all programmed alarm targets when an alarm is triggered **and** when the alarm condition has cleared. When this option is deselected, alarm reports are only sent when an alarm is triggered. Default is selected.

Report Tone Alarms: Press **enter** to select or deselect this option. If this option is selected (indicated by an 'x'), reports will be sent to all programmed alarm targets when the locate tone has been activated. When this option is deselected, alarm reports are not sent for tone activation or deactivation. Default is selected.

Use Graphical Characters: Press **enter** to select or deselect this option. If this option is selected (indicated by an 'x'), graphical characters will be used to draw the AUIC menus while connected via serial, modem or Telnet. If the terminal program being used does not properly display graphical characters turn this option off to display only ASCII text characters. Default is disabled.

System Backup and Restore (plus version): The system backup can be sent to an email address, an FTP server or downloaded via modem. The system can be restored via modem or FTP uploads. See section 11.2 for details on completing system backups.

Press **enter** on <OK> to save the system configuration, or press **enter** on <CANCEL> to cancel changes made to the system settings.

7.2 Network Configuration

The network settings for the 4200 CMS are available through the Comms Configuration Menu. This menu allows the user to view and configure the network and email settings for the 4200 CMS (Administrator or Diagnostic login only).

To configure the Network Settings, highlight the **Comms Configuration** option from the 4200 Cable Monitoring System Main Menu and press **enter**. The Comms Configuration menu will appear (Figure 21). Use the **Up** and **Down Arrow** keys to move between menu items.

Comms Config	
Address	<u>10.1.1.74</u>
Netmask	<u>255.255.255.0</u>
Gateway	<u>10.1.1.6</u>
DNS	<u>10.1.1.254</u>
Enable NTP	()
NTP Server 1	<u>0.0.0.0</u>
NTP Server 2	<u>0.0.0.0</u>
NTP Server 3	<u>0.0.0.0</u>
SMS/Email Server	_____
SMS/Email From Address	auic@localhost
Enable Data Modem	()
Enable Telnet	()
Telnet Port	_____
<OK>	<CANCEL>

Figure 21: Comms Configuration Menu

Address: Enter the IP address assigned to the 4200 CMS by your network administrator and press **enter**.

Netmask: Enter the network mask assigned to the 4200 CMS by your network administrator and press **enter**.

Gateway: Enter the default gateway address and press **enter**.

DNS: Enter the address of the domain name server and press **enter**.

Enable NTP: Select this option if the 4200 AUIC time is to be synchronized with a NTP (Network Time Protocol) server.

NTP Server x: Enter the IP address of up to three NTP servers (one per line).

SMS/Email Server: Enter the address of the SMTP (outgoing mail) server the AUIC will use to send email reports and press **enter**. This setting is required for email or SMS reports.

SMS/Email From Address: Enter the return address the AUIC should use when sending email or SMS alarm reports and press **enter**. The default address is auic@localhost.

Enable Data Modem: Diagnostic access only. Press **enter** to select or deselect this option. If this option is selected (indicated by an 'x') modem connections to the 4200 AUIC are allowed. Disabling the data modem connection will not affect the IVR access to the MTM for tone locating operation. See section 3.2 for security implications. Default is disabled.

Enable Telnet: Diagnostic access only. Press **enter** to select or deselect this option. If this option is selected (indicated by an 'x') Telnet connections to the 4200 AUIC are allowed. Disabling the Telnet connection will not affect SNMP or email functionality. See section 3.2 for security implications. Default is disabled.

When all the network settings have been entered press **enter** on <OK> to save the network settings or press **enter** on <CANCEL> to discard the changes. If the user accepts the changes made to the network settings, the AUIC will reset the network connection and the user will be disconnected if they are connected via a Telnet connection.

7.3 Date/Time Configuration

The Date/Time Configuration Menu allows the user to configure the system date and time (Administrator or Diagnostic login only). Note: Cannot modify if NTP is enabled.

To configure the Date and Time, highlight the **Date/Time Configuration** option from the 4200 Cable Monitoring System Main Menu and press **enter**. The Date and Time Config menu will appear (Figure 22). Use the **Up** and **Down Arrow** keys to move between menu items.

Date and Time Config	
Time Format	[HH:MM:SS (12 Hour)]
Date Format	[YYYY-MM-DD]
Time Zone	[Canada/Central]
Time	[08]:[05] [AM]
Date	[2013]-[03]-[01]
<OK> <CANCEL>	

Figure 22: Date and Time Configuration Menu

To change the time format, press **enter** on the time format menu item and the Time Format Menu will appear (Figure 23). Select the desired time format and press **enter**.




Figure 23: Select Time Format

To change the date format, press **enter** on the date format menu item and the Date Format Menu will appear (Figure 24). Select the desired date format and press **enter**.




Figure 24: Select Date Format

After selecting the date and time formats, the correct date and time can be entered. Use the up and down arrow keys to select the time or date field that needs to be changed and press **enter**. Select the correct number from the list and press **enter**. Use the same procedure to change the other time and date fields. Press **enter** on <OK> to save the date and time settings, or press **enter** on <CANCEL> to cancel changes made to the date and time.

If NTP is enabled in the network setup the date and time cannot be manually adjusted. The message “*Using NTP Server, Cannot Modify Time/Date Values*” will appear on the Date and Time Config menu.

8. Alarm Processing

The 4200 CMS with AUIC is able to alert users of alarm conditions by sending reports via email, Short Message Service (SMS), modem and SNMP. The user can also be alerted to alarm conditions using dry alarm contacts or by monitoring the system using a direct serial connection or telnet connection.

8.1 Alarm Target Configuration

The alarm reporting settings for the 4200 CMS are available through the Alarm Target Configuration Menu (Administrator or Diagnostic login only). All alarm reports will be sent to the alarm targets specified in this menu when using the standard version of the AUIC. If the plus version is installed, the Event Configuration menu (section 8.2) allows specific alarm types to be sent to various alarm targets.

To configure the alarm reporting settings, highlight the **Alarm Target Configuration** option from the 4200 Cable Monitoring System Main Menu and press **enter**. The Alarm Target Configuration menu will appear (Figure 25). This menu will show all the programmed alarm targets.




Figure 25: Alarm Target Configuration Menu

To add an alarm report target, select **Add Alarm Target** and press **enter**. A dialog box will appear prompting for a target description (Figure 26). Enter a description that uniquely describes the target, for example “John’s Email”.

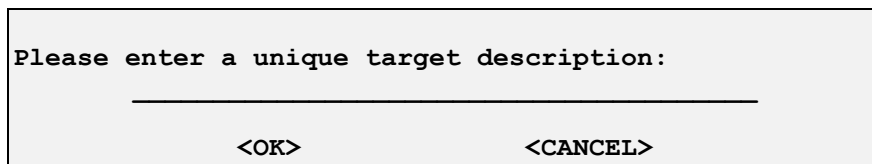


Figure 26: Set Target Description

Press **enter** on <OK> to save the target description, or press **enter** on <CANCEL> to cancel changes made to the target description.

After a description has been entered, the target type must be selected. The Add Alarm Target Menu will appear (Figure 27).

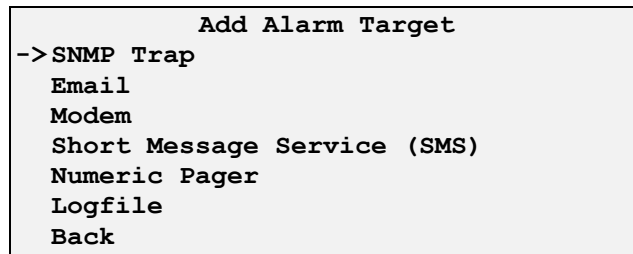


Figure 27: Add Alarm Target Menu

Use the **up** and **down arrow** keys to select one of the target types and press **enter**. A dialog box will appear prompting for target details. Use the arrow keys to select fields and press **enter** to change the values. When all the target details as described below have been entered press **enter** on <OK> to save the alarm target.

SNMP Trap: Enter the IP address of the SNMP management station given by the SNMP administrator. Enter the SNMP Trap Community String. (Use only for SNMP managed systems)

Email: Enter the email address that will receive alarm reports. To send email reports to multiple email targets, enter up to five email addresses separated by commas in this field.

Note: *Under normal conditions, message delivery should occur in seconds. However, due to inconsistencies of the Internet, message delivery can take longer and is not guaranteed.*

Modem: Enter the phone number that will be called to receive the alarm reports (include area code, no dashes or spaces required). **Note:** *Tone dialing is the default method. If you are using a pulse dialing system you must precede the phone number with the letter 'p' (p12041234567).* Select the port speed (default is 9600 baud). Select the serial format you would like to use: 8N1 (8 Bit word length, No parity and 1 Stop Bit), 7E1 (7 Bit word length, Even parity and 1 Stop Bit) or 7O1 (7 Bit word length, Odd parity and 1 Stop Bit). Default setting is 8N1.

Short Message Service (SMS): Enter the Short Message Service (SMS) address that will receive alarm reports. To send duplicate SMS reports to multiple SMS targets, enter up to five SMS addresses separated by commas in this field.

Note: *Under normal conditions, message delivery should occur in seconds. However, due to inconsistencies of the Internet, message delivery can take longer and is not guaranteed.*

Numeric Pager: Enter the seven-digit pager phone number with no spaces or hyphens. To send duplicate pages to multiple pagers, enter up to five pager numbers separated by commas in this field. Also enter the numeric string that will be sent to the numeric pager.

Log file (plus version): Enter the name of the log file and the number of alarms to save in the log file. The AUIC will save a list of alarms that are targeted to the log file. Select Alarm Logs from the main AUIC menu to view and manage the log files (see section 8.4 - Alarm Logs).

8.2 Event Configuration (plus version)

Event configuration on the plus version of the AUIC can be set to one of two modes, **simple** or **advanced**. When the simple event user interface is selected, all alarm reports are sent to all alarm targets just as they are on the standard AUIC version. When the advanced event user interface is selected, users can perform detailed alarm event configuration so specific alarm reports can be sent to specific alarm targets.

When the Event Configuration Menu item is selected from the main menu, the Event configuration menu will appear (Figure 28). Press **enter** on this menu item to toggle the event user interface between **SIMPLE** and **ADVANCED**. The default setting is **simple**.

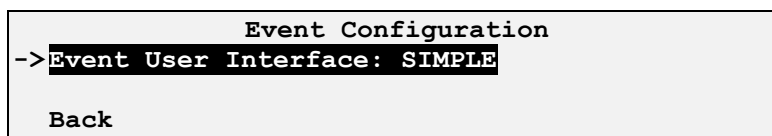


Figure 28: Simple Event Configuration Menu

8.2.1 Understanding Advanced Event Configuration

This section will explain the advanced event configuration concepts. For configuration instructions refer to Section 8.2.2 Completing the Advanced Event Configuration.

The advanced event configuration menu is organized in a hierarchical tree manner. The tree is made up of events and default groups. A sample event configuration tree is shown in Figure 29. The default groups are shown in bold text and the events are shown in normal text. If a plus sign (+) appears next to a default group, it indicates that there are events in that default group that are not shown. If a minus sign (-) appears next to a menu item it indicates that all the events in that group are being displayed.

Note: The entries in the event configuration tree will vary depending on the cards and modules installed in the 4200 CMS.

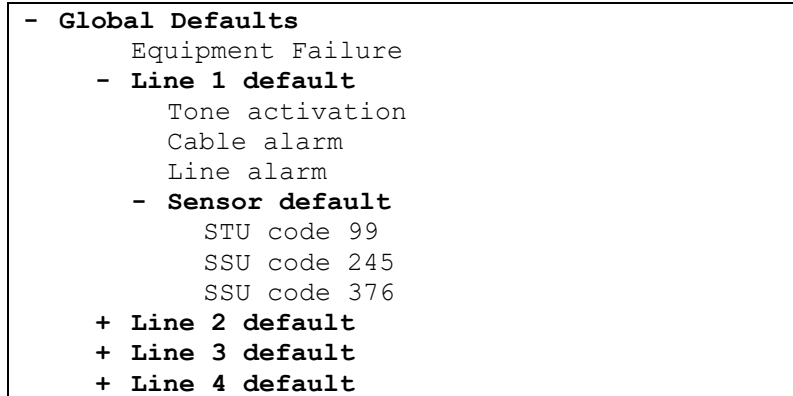


Figure 29: Advanced Event Configuration Tree

Alarm targets can be assigned to any of the following events:

- Equipment failure
- Tone activation
- Cable alarms
- Line alarms
- Individual sensor alarms

If a specific event does not have an alarm target associated with it, the AUIC will check the default group directly above the event for a target. If an alarm target exists in the default group, the report will be sent to that target. If an alarm target does not exist in the default group, the AUIC will check the next default group further up the tree and so on until a target is found. The global default group is the last group the AUIC will check for an alarm target. If there is no alarm target assigned to the global default group, the alarm report will not be sent. Assigning an alarm target to the global default group is highly recommended so alarm reports will not be missed if an event does not have a specific alarm target.

Note: Targets assigned to default groups including the global default group will **not** receive alarm reports if a target has been assigned to the specific event where the alarm has occurred.

The following examples illustrate the alarm processing of the AUIC when the advanced event configuration has been activated and configured.

Example 1

For this example refer to Figure 30. Suppose alarm targets have been assigned to the global default group and the tone activation event for line 2. When a cable alarm occurs on line 2, the AUIC will check for an alarm target assigned to the cable alarm on line 2. There is no target assigned to the cable alarm so the AUIC moves up the tree and checks the line 2 default. There is no target assigned to the line 2 default so the AUIC moves up the tree and checks the global default. There is a target assigned to the global default so the alarm report is sent to that target.

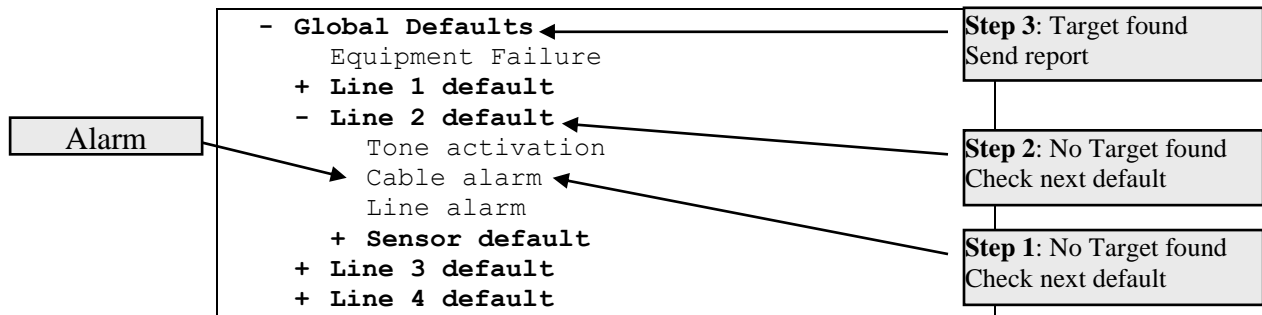


Figure 30: Advanced Event Configuration Example 1

Example 2

For this example refer to Figure 31. Suppose alarm targets have been assigned to the global default group and the cable alarm event for line 2. When a cable alarm occurs on line 2, the AUIC will check for an alarm target assigned to the cable alarm on line 2. There is a target assigned to the cable alarm so the alarm report is sent to that target.

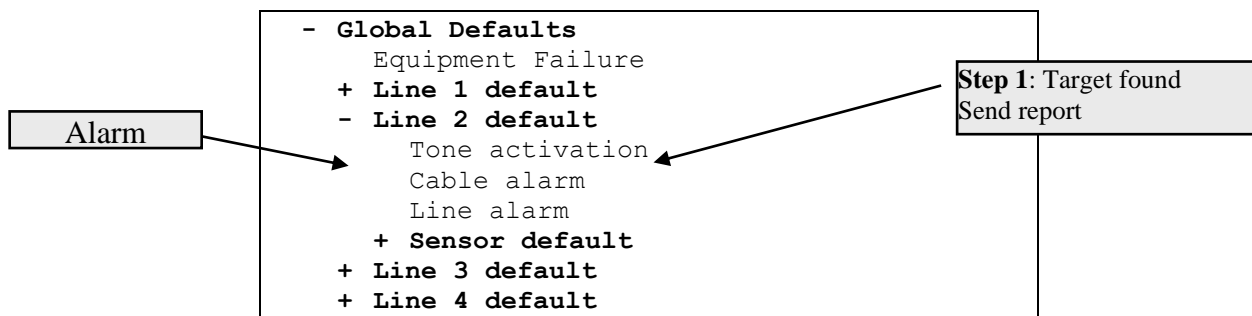


Figure 31: Advanced Event Configuration Example 2

Example 3

For this example refer to Figure 32. Suppose alarm targets have been assigned to the global default group and the sensor default group for line 1. When SSU code 376 is triggered on line 1, the AUIC will check for an alarm target assigned to the SSU code 376 on line 1. There is no target assigned to the SSU so the AUIC moves up the tree and checks the sensor default. There is a target assigned to the sensor default so the alarm report is sent to that target.

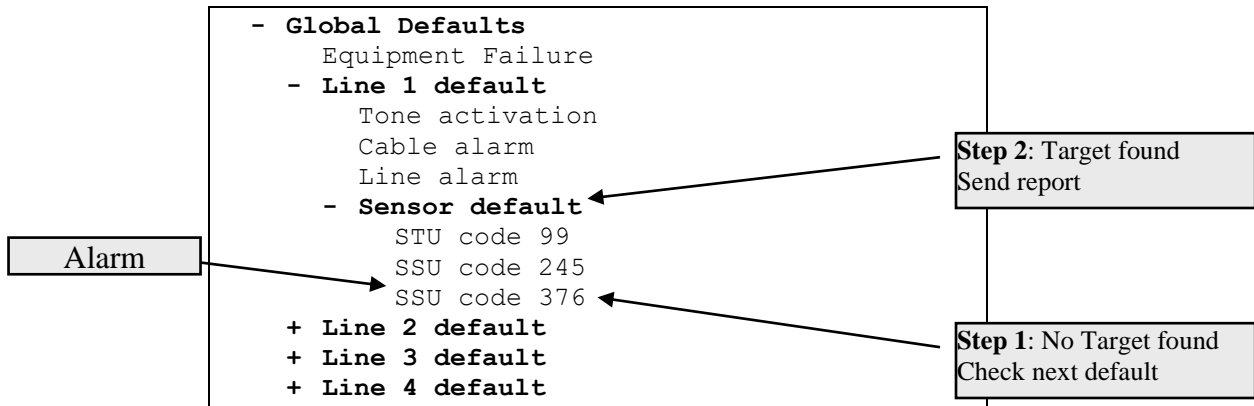


Figure 32: Advanced Event Configuration Example 3

8.2.2 Completing the Advanced Event Configuration

Ensure the **Advanced** event user interface is selected and the advanced menu appears for detailed alarm event configuration (Figure 33).

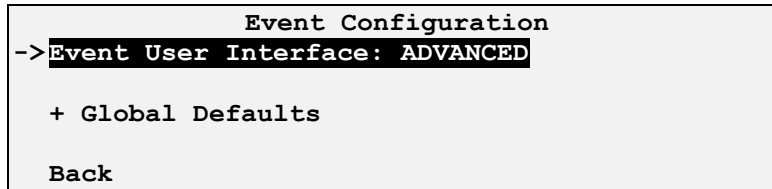


Figure 33: Advanced Event Configuration Menu

If a plus sign (+) appears next to a menu item it indicates the menu can be expanded. Press the plus key or right arrow when the menu item is highlighted to expand the menu. If a minus sign (-) appears next to a menu item it indicates the menu can be collapsed. Press the minus key or left arrow when the menu item is highlighted to collapse the menu. Figure 34 shows a partially expanded event configuration menu.

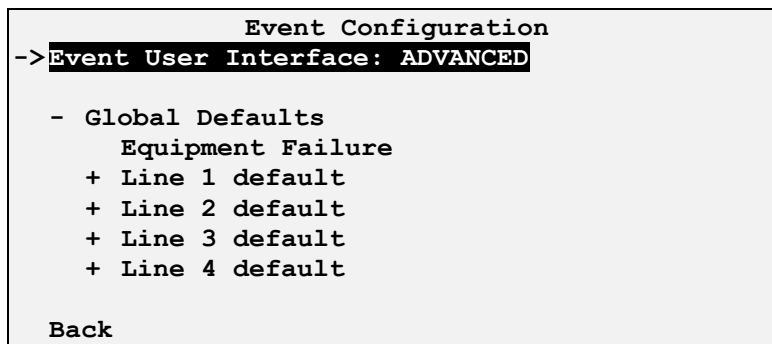


Figure 34: Expanded Event Configuration Menu

To set an alarm target for a specific event or default group, select the menu item and press **enter**. The Edit Targets Menu will appear. Figure 35 shows the menu for the global defaults group; menus for all other alarm events and default groups will be similar.




Figure 35: Edit Targets Menu

Press **enter** on **Add target** to apply an alarm target to the specific event or default group. The Add alarm targets menu will appear (Figure 36).

```
                Add Alarm Targets to Event
->NOC Email
   John's Email
   Field tech pager

   All targets
   No targets

   Back
```

Figure 36: Add alarm targets Menu

All alarm targets that have been setup in the Alarm Target Configuration will be shown (See Section 8.1). Select the target to add or select all or no targets and press **enter**.

After selecting a target, the Edit Targets Menu will be shown again, now with the selected targets added to the target list (Figure 37). Continue to add targets to the event or default group as required. When all the required targets have been added, select **back** and press **enter**.

```
                Edit targets for global defaults
->NOC Email

   Add target
   Back
```

Figure 37: Edit Targets Menu with Target

An asterisk (*) next to an event or default group indicates a target has been assigned. A tilde (~) next to a default group indicates that an alarm target has been assigned to an alarm event under that default group.

The event configuration menu will now show an asterisk (*) next to the event or group that has targets assigned to it (Figure 38).

```
                Event Configuration
->Event User Interface: ADVANCED

- Global Defaults *
  Equipment Failure
+ Line 1 default
+ Line 2 default
+ Line 3 default
+ Line 4 default

Back
```

Figure 38: Event Configuration Menu with Targets

Select another event to configure and press enter or select back and press enter to return to the main menu.

8.3 Alarm Reports

The 4200 CMS with AUIC can send alarm reports in two different formats, standard and short. The standard format is used for email and modem reports, the short format is used for SMS devices. Figure 39 shows a typical standard alarm report.

```
Norscan 4200 CMS - Alarm Report
(Unscheduled)
-----
System ID:  unnamed 4200
CLLI Code:
Alarm Date: 14:57:05 - 2013-03-22
-----
Line 2: Default Description
        Sensor alarm, code 123
-----
End of report
```

Figure 39: Standard Alarm Report

The standard report indicates the user-programmed system ID, the date and time of the alarm, the line number and description along with the type of alarm. A short form of the standard report is sent to SMS devices (Figure 40). The short form of the report indicates the type of alarm, line description and the system ID.

```
Sensor alarm 123
Line: 2.Default Description
SysDesc: unnamed 4200
```

Figure 40: Short Form Alarm Report

8.4 Alarm Logs (plus version)

The alarm log menu item allows the user to view, download and clear alarm logs. This option is only available on the Plus Version of the AUIC. To access the alarm log menu, highlight **Alarm Log** from the 4200 Cable Monitoring System Main Menu and press **enter**. A list of available log files will appear (Figure 41).

```
Select Log file
->System alarm log
Back
```

Figure 41: Select Log file Menu

Any log file alarm targets that have been created will be listed in addition to the system log file. See Section 8.1 Alarm Target Configuration for details on log file alarm targets. The system alarm log will show the last 300 system alarms. An alarm target log file will store the alarms that were sent to that specific alarm target to a maximum number set by the user

Select a log file from the menu and press **enter**. The alarm log menu will appear (Figure 42). Use the **Arrow** keys to move between menu items and press **enter** to select an item.

```
Operation to Perform
->View System Alarm Log
Download System Alarm Log
Clear System Alarm Log
Back
```

Figure 42: Alarm Log Menu

View Alarm Log: Select this menu item to view the alarm history stored in the log file. An alarm history log will appear showing all the alarms that have been targeted to the selected log file (Figure 43). Press **CTRL-n** to see the next page of history or **CTRL-p** to see the previous page of history. **CTRL-b** and **CTRL-e** will move to the beginning and end of the log file respectively. If the log file entry is too long for a single line use the right and left arrow keys to scroll the text to the right or left. To exit the view alarm log screen press **enter**.

```
System alarm log
->2013-01-15 09:24:13 AM Cable alarm on line 1, current = -2.24mA
2013-01-15 09:23:43 AM Sensor alarm triggered on line 1, sensor code:428
2013-01-13 03:43:18 PM Cable alarm cleared on line 2
2013-01-13 12:18:33 PM Cable alarm on line 2, current = -1.28mA
2013-01-05 05:24:54 PM Tone cleared on line 1
2013-01-05 11:34:22 AM Tone activated on line 1

CTRL-n: Next page      CTRL-b: Beginning      <- ->: Scroll text
CTRL-p: Previous page  CTRL-e: End            RETURN: Exit
```

Figure 43: Viewing alarm logs

Download Alarm Log: Select this menu item to display the contents of the alarm history log file on the screen with no formatting or page breaks. This gives the user the capability of capturing the log file data to a text file. Before selecting this option start the logging function on the terminal program. Press **enter** and the log file will be displayed on the terminal screen. When all of the history data has been displayed, stop the logging function on the terminal program and press **enter** to return to the alarm log menu.

Clear Alarm Log: Select this menu item to clear the alarm history stored in the selected log file.

8.5 Dry Alarm Contacts

The 4200 CMS with AUIC can notify the user of Equipment Alarms and Monitoring Alarms through the use of dry alarm contacts. Simply connect a bell, buzzer, light or an alarm supervisory system to TB1-8 and TB1-9 on the rear panel of the 4200 CMS for equipment alarms or to TB1-9 and TB1-10 for monitoring alarms. Maximum 120Vac or 110Vdc and 200mA.

The equipment alarm contacts are normally open and will short if an equipment alarm occurs. Equipment alarms occur under the following conditions:

- Loss of supply voltage
- ACU or MTM card failure

The monitoring alarm contacts are normally open and will short if a monitoring alarm occurs. Monitoring alarms occur under the following conditions:

- Cable alarms
- Line alarms
- Sensor alarms

8.6 Viewing Alarm Status

Using a direct serial connection, modem connection or telnet connection, a user can view the current status of any alarms on the 4200 CMS. If an alarm report is received, connect to the 4200 CMS with AUIC to obtain further details.

When an alarm has occurred the main menu will indicate which line has an alarm by showing an exclamation mark (!) next to the line (Figure 44).

```

                                Main Menu
->!Line 1. Default Description - ARMOR
   Line 2. Default Description - no cards connected
   Line 3. Default Description - no cards connected
   Line 4. Default Description - no cards connected

System Configuration
Comms Configuration
Date/Time Configuration
Tone Frequency Configuration
Alarm Target Configuration
Alarm Log
Diagnostics

Quit
```

Figure 44: 4200 CMS Main Menu With Alarms

Select the line in alarm and press **enter**. The Line Control Menu will appear (Figure 45).

```
Line Control Menu
Line 1 :Default Description
Sensor :Standard no alarms
Armor  :ON -1.34mA 34.06kR cable alarm!
Tone   :OFF

->Deactivate armor monitoring
  Reset alarms
  Perform termination test
  View test results
  Activate tone (577Hz)
  Activate tone safety lock
  Configure line...
  Back
```

Figure 45: Line Control Menu With Alarms

The Line Control Menu will show details on the status of the alarm condition. For specific details on alarms or alarm conditions, please see the user manual that corresponds to the card type that is in alarm.

9. AUIC Reports (Plus Version)

The plus version of the AUIC is able to send four types of reports: Status, Active Alarm, Alarm History, and List. The reports can be sent on demand or scheduled to run at any time.

9.1 Status Report

The AUIC status report will list the status of each line in the 4200 CMS. Before sending the status report, the AUIC will initiate a termination test on all the armor monitoring lines in the system. The termination test will take approximately 3 minutes for each termination sensor on the line. The following example shows the sheath monitoring current on lines 1 and 2 (Figure 46). The report also includes the system ID and CLLI code along with the time and date of the report.

```
-----  
                Norscan 4200 CMS - Status Report  
-----  
System ID   : unnamed 4200  
CLLI Code   :  
Report Date : 12:00:00 PM - 2013-03-21  
-----  
Line 1 - Default Description:  
  Armor monitoring  
  Current      : -0.14 mA  
  Resistance    : >150 kR  
  Cable alarm  : No alarms  
  Line alarm   : No alarms  
-----  
Line 2 - Default Description:  
  Sheath monitoring  
  Current      : -0.17 mA  
  Resistance    : >150 kR  
  Cable alarm  : No alarms  
  Line alarm   : No alarms  
-----  
Line 3 - Default Description:  
  No services allocated  
-----  
Line 4 - Default Description:  
  No services allocated  
-----  
end of report.
```

Figure 46: Status Report

9.2 Active Alarm Report

The active alarm report will list the current alarm status of each line in the 4200 CMS. The following example shows no sheath monitoring alarms on line 1; line 2 did not receive the termination code and measured high line resistance on the last termination test (Figure 47). The report also includes the system ID and CLLI code along with the time and date of the report.

```
-----  
Norscan 4200 CMS - Active Alarm Report  
-----  
System ID   : unnamed 4200  
CLLI Code   :  
Report Date : 12:00:00 PM - 2013-03-21  
-----  
Line 1 - Default Description:  
  Armor monitoring  
  Cable alarm : No alarms  
  Line alarm  : No alarms  
-----  
Line 2 - Default Description:  
  Armor monitoring  
  Cable alarm : No alarms  
  Line alarm  : Active  
  Missed code detected for:  
    - unconfigured sensor code 99  
  
  High resistance detected for:  
    - unconfigured sensor code 99  
-----  
Line 3 - Default Description:  
  No services allocated  
-----  
Line 4 - Default Description:  
  No services allocated  
-----  
end of report.
```

Figure 47: Active Alarm Report

9.3 Alarm History Report

The alarm history report (Figure 48) shows up to the last 300 monitoring and system alarms stored in the AUIC. Each alarm in the history report will indicate the time and date of the alarm and a brief description of the alarm. The report also includes the system ID and CLLI code along with the time and date of the report.

```
-----  
Norscan 4200 CMS - Alarm History Report  
-----  
System ID   : unnamed 4200  
CLLI Code   :  
Report Date : 12:00:00 PM - 2013-03-21  
-----  
#1. 2013-03-21 08:33:35 AM - Line #4 - Tone activated on line 4  
#2. 2013-03-21 08:54:47 AM - Line #4 - Tone cleared on line 4  
#3. 2013-03-21 08:59:13 AM - Line #4 - Tone activated on line 4  
#4. 2013-03-21 09:20:15 AM - Line #4 - Tone cleared on line 4  
#5. 2013-03-21 11:45:02 AM - Line #1 - Line alarm on line 1  
#6. 2013-03-21 12:45:33 PM - Line #1 - Line alarm cleared on line 1  
#7. 2013-03-21 01:12:59 PM - Line #1 - Tone activated on line 1  
#8. 2013-03-21 01:14:17 PM - Line #1 - Tone cleared on line 1  
#9. 2013-03-21 01:15:22 PM - Line #1 - Tone activated on line 1  
#10.2013-03-21 01:35:35 PM - Line #1 - Tone cleared on line 1  
end of report.
```

Figure 48: Alarm History Report

9.4 List Report

The list report will list the services that are assigned to each line in the 4200 CMS. The following example shows armor monitoring on lines 1 and 2 (Figure 49). The report also includes the system ID and CLLI code along with the time and date of the report.

```
-----  
                Norscan 4200 CMS - List Report  
-----  
System ID      : unnamed 4200  
CLLI Code     :  
Report Date   : 12:00:00 PM - 2013-03-21  
-----  
Line 1 - Default Description:  
    Armor monitoring  
-----  
Line 2 - Default Description:  
    Armor monitoring  
-----  
Line 3 - Default Description:  
    No services allocated  
-----  
Line 4 - Default Description:  
    No services allocated  
-----  
end of report.
```

Figure 49: List Report

10. Locate Scheduling (Plus Version)

The plus version of the AUC is able to automatically place a locate signal on a line or a chosen set of lines at a specified time of day. The locate signal can be configured to turn on at the specified time on any number of days of the week.

10.1 Accessing the Menu

The Locate Scheduling Menu may be found listed in the Main Menu after logging into the console.

```

                                     Main Menu
Line 1. Default Description - ARMOR
Line 2. Default Description - ARMOR
Line 3. Default Description - no cards connected
Line 4. Default Description - no cards connected

System Configuration
Comms Configuration
Date/Time Configuration
Tone Frequency Configuration
Alarm Target Configuration
Event Configuration
Report Scheduling
->Locate Scheduling
Alarm Log
Diagnostics

Quit
```

Figure 50: 4200 CMS Main Menu (Plus Version)

10.2 Locate Scheduling Menu

Within the menu the user has the ability to toggle scheduling on or off. When turned on the schedule will assume the settings that are stored in this menu. These settings will control which lines are activated, which days the tone will be activated on, and at which time the tone will be turned on. The user may also set the duration that the tone will stay activated.

```
                                Edit Locate Scheduling
->Enable Scheduling:  on

    Lines:  None set
    Days :  None set
    Time  :  12:01 PM
    Duration : 001 Hours

    Done
```

Figure 51: Locate Scheduling Menu

10.3 Line Selection

The user may choose to activate tone on any combination of lines or no lines at all. After selecting which lines will be scheduled for toning, accept the changes by pressing OK.

```

      Edit Lines

Use the up/down arrows to move between fields
Press enter to toggle the field value

      Line 1:  ( )
      Line 2:  ( )
      Line 3:  ( )
      Line 4:  ( )

      < OK >                <Cancel>

```

Figure 52: Line Selection

10.4 Day Selection

The user may choose to activate tone on any combination of days or on none at all. After selecting which days will be scheduled for toning, accept the changes by pressing OK.

```

      Edit Days

Use the up/down arrows to move between fields
Press enter to change the field value

      Sunday:  ( )
      Monday:  ( )
      Tuesday: ( )
      Wednesday: ( )
      Thursday: ( )
      Friday:  ( )
      Saturday: ( )

      < OK >                <Cancel>

```

Figure 53: Day Selection

10.5 Time Selection

The user may choose to activate tone at any time of day. After selecting which time to activate the tone, accept the changes by pressing OK.

```
                Edit Time

    Use the up/down arrows to move between fields
    Press enter to change the field value

                Time:  [12]:[05] [PM]

                < OK >                <Cancel>
```

Figure 54: Time Selection

10.6 Duration Selection

The user may choose to activate tone for as long as 1 to 10 hours. After entering the length of time for which the tone will stay activated, accept the changes by pressing OK.

```
                Edit Duration

                Hours : (1-10) 001

                < OK >                <Cancel>
```

Figure 55: Duration Selection

11. System Administration

11.1 Software Upgrades

The Diagnostics Menu allows the user to perform software upgrades and diagnostic functions on the AUIC (Diagnostic login only).

Warning! Use caution when accessing diagnostic functions as configuration settings may be lost or software damage may occur.

To perform software upgrades on the AUIC or firmware upgrades on the expansion cards, highlight the **Diagnostics** option from the 4200 CMS Main Menu and press **enter**. The Diagnostics menu will appear (Figure 56). Select the upgrade function using the up and down arrow keys and press **enter**.

```
                                Diagnostics Menu
->Card Connect
  Upgrade AUIC Software Via ZModem
  Upgrade AUIC Software Via Kermit
  Upgrade AUIC Software Via FTP/HTTP Server
  Card Firmware Upgrade
  Unscheduled reports include unconfigured sensors: no
  Reboot
  Activate Full Version
  Back
```

Figure 56: Diagnostic Menu

11.1.1 AUIC Software Upgrades

To upgrade the AUIC software via a Z-Modem or Kermit file transfer ensure the AUIC upgrade file is available on the local computer then select **Upgrade AUIC Software Via Z-Modem** or **Upgrade AUIC Software Via Kermit** from the diagnostic menu. The AUIC will prompt the user to start the Z-Modem or Kermit file transfer. Characters may appear on the screen as the AUIC waits for the file transfer to begin. Start sending the latest AUIC software file from the local computer using the **Z-Modem or Kermit** file transfer protocol. Refer to the terminal software user manual for file transfer details. See Figure 57 for the Tera Term™ Send File Menu Option.

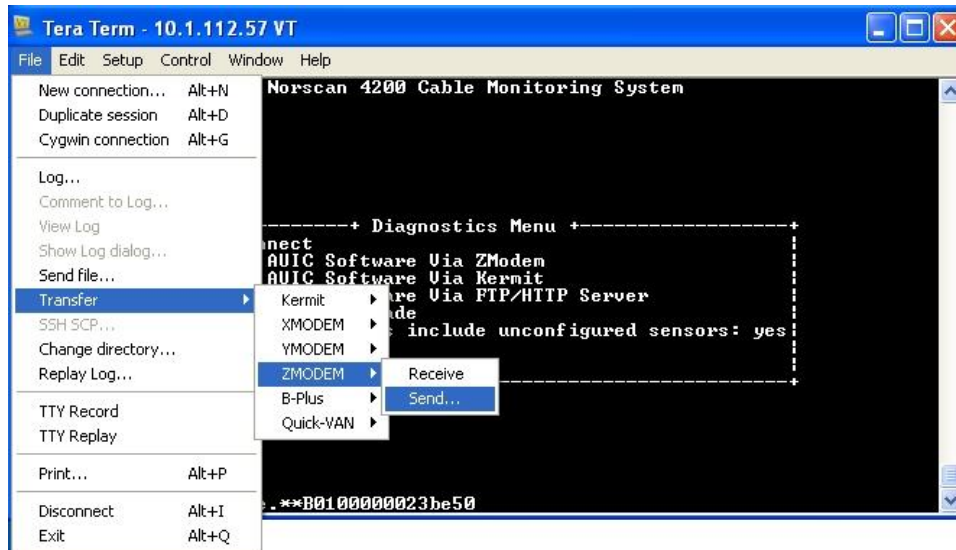


Figure 57: TeraTerm Send File Menu Option

When the file transfer is complete the AUIC will process the upgrade file and automatically reboot. After rebooting the new software version will be active.

To upgrade the AUIC software using a FTP or HTTP server determine the correct URL for the AUIC upgrade file then select **Upgrade AUIC Software Via FTP/HTTP Server** from the diagnostic menu. The AUIC will prompt the user for the URL of the upgrade file. Enter the URL and press **enter** See Figure 58.

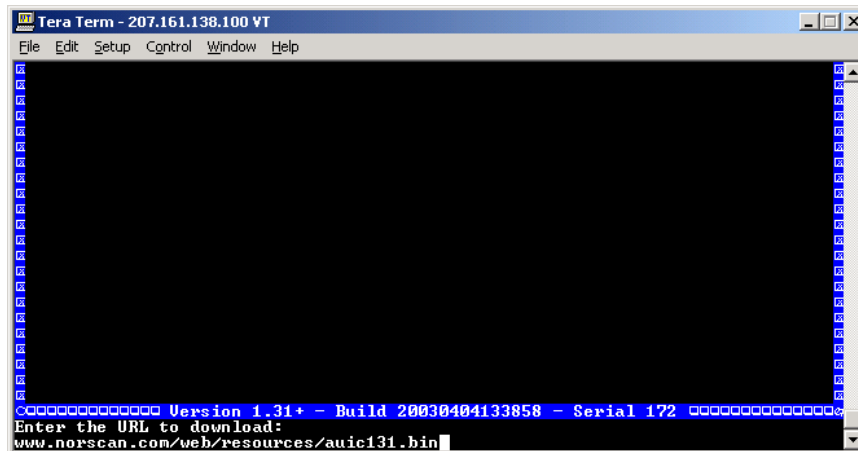


Figure 58: FTP/HTTP upgrade

When the file transfer is complete the AUIC will process the upgrade file and automatically reboot. After rebooting the new software version will be active.

11.1.2 Card Firmware upgrades

The firmware of the expansion cards in the 4200 CMS may be upgraded from the AUIC using a FTP/HTTP server or a Kermit file transfer.

Warning: Upgrading an expansion card or module with the incorrect firmware may cause the card to be inoperable. Be sure the firmware being uploaded is correct for the card or module being upgraded.

To upgrade the firmware of the expansion cards in the 4200 CMS select **Card Firmware Upgrade** from the diagnostic menu, the Card Upgrade Menu will appear (Figure 59). Each expansion card or module in the 4200 CMS will be shown with its serial number, hardware revision number and firmware version number. Check the Norscan website at www.norscan.com for the latest firmware versions.

```
Card Upgrade Menu
->Slot 3: ACU/STU #01039 Rev 3.02 Ver 4.02
   Slot 4: ACU/STU #02250 Rev 4.02 Ver 5.07
   Slot 7: MTM #00529 Rev 2.04 Ver 3.02

Back
```

Figure 59: Card Upgrade Menu

If an upgrade is required, use the arrow keys to select the card to be upgraded and press **enter**. An option will be shown to upgrade the firmware from a URL (ftp/http) or a Kermit download (Figure 60).

```
Please select the firmware to program
->Download and upgrade from URL (ftp/http)
   Download and upgrade using Kermit

Back
```

Figure 60: Firmware Download

After selecting an option, a dialog box will appear prompting for the URL of the firmware to download or prompting to start downloading the firmware using Kermit.

When the upgrade has been completed, a message will appear indicating whether the upgrade was successful or not. Press **enter** on **OK** to return to the previous menu.

11.2 System Backup (plus version)

To complete a system backup highlight the System Configuration option from the 4200 Cable Monitoring System Main Menu and press enter. The System Config menu will appear (Figure 61).

```

System Config
System Description      unnamed 4200
Location               unknown location
CLLI Code
Operator Password
Administrator Password administrator
Diagnostic Password   diagnostic
IVR Password
SNMP Read-Only Community String public
SNMP Read/Write Community String system
Audible Alarms        ( )
Report Cleared Alarms (x)
Report Tone Alarms    (x)
Use Graphical Characters ( )

                        <Backup System> <Restore System>

                        <OK>                <CANCEL>
  
```

Figure 61: System Configuration Menu

To backup the AUIC settings and database information, select **Backup System** and press **enter**. The Backup System menu will appear (Figure 62).

```

Backup System
->Setup Scheduled Backup
   Perform Backup

Back
  
```

Figure 62: Backup System Menu

Setup Scheduled Backup: This option allows the user to set scheduled backups to run automatically on the AUIC. The AUIC will send the system backup file as an Email file attachment on the day and time specified by the user. When this option is selected, the Edit Scheduled Backups menu will appear (Figure 63).

```

Edit Scheduled Backups
->|Email Address      : [PRESS ENTER TO SET]
   Backup Days       : [PRESS ENTER TO SET]
   Backup Time       : [PRESS ENTER TO SET]

Back
  
```

Figure 63: Editing Scheduled Backups

Select **Email Address** and press **Enter** to specify the email address where the backup file will be sent.

Next, set the day when the system backup will be executed by selecting the **Backup Days** menu item, the Backup Days menu will appear (Figure 64). Use the up and down arrow keys to move between days then press the space bar to select the backup for a specific day. After all the desired days have been selected press **Enter** on **Ok** to save the changes.

```
      Edit Scheduled Backup Days

      Sunday:      ( )
      Monday:      ( )
      Tuesday:     ( )
      Wednesday:  ( )
      Thursday:   ( )
      Friday:      ( )
      Saturday:   ( )

      <OK>          <CANCEL>
```

Figure 64: Editing Backup Days

Finally, set the time when the system backup will be executed by selecting the **Backup Time** menu item, the Backup Time menu will appear (Figure 65). Use the up and down arrows to select hours or minutes then press enter to change the values.

```
      Edit Backup Time

      Use the up/down arrows to move between fields
      Press enter to change the field value

      Backup Time:  [02]:[30] [AM]

      < OK >       <CANCEL>
```

Figure 65: Editing the Backup Time

Perform Backup: This option will perform an immediate backup of the AUIC via email, Z Modem file transfer, or transfer to an FTP site. When this option is selected, the Perform Backup menu will appear (Figure 66).

```
      Perform Backup

      -> Email
      Zmodem
      Kermit
      FTP Site

      Back
```

Figure 66: Perform Backup Menu

Select the destination for the system backup and press enter.

Email: The AUIC will prompt for an email address and the backup file will be sent as an Email file attachment to that email address.

Z modem: The AUIC will begin a Z modem file transfer. Start the receive Z modem function on the communications software being used to connect to the AUIC. The backup file will be saved to the local computer.

Kermit: The AUIC will begin a Kermit file transfer. Start the receive Kermit function on the communications software being used to connect to the AUIC. The backup file will be saved to the local computer.

FTP Site: The AUIC will prompt for an FTP server, login name and password, destination directory, and the filename. The AUIC will send the backup file to the FTP server.

11.3 System Restore (plus version)

To complete a system restore, highlight the System Configuration option from the 4200 Cable Monitoring System Main Menu and press enter. The System Config menu will appear (Figure 61). To restore the AUIC settings and database information, select **Restore System** and press **enter**. The Restore System menu will appear (Figure 67).

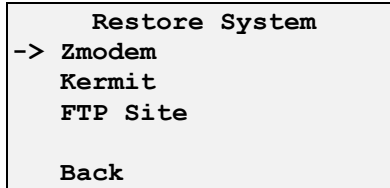


Figure 67: Restore System Menu

Z-Modem: Restore AUIC settings and database information via a Z-Modem file transfer. Ensure the AUIC backup file is available on the local computer, and then select this menu item to restore the AUIC data. The AUIC will prompt the user to select OK then start the Z-Modem file transfer. Characters may appear on the screen as the AUIC waits for the file transfer to begin. Start sending the backup file from the local computer using the **Z-Modem** file transfer protocol. When the file transfer has been completed, the AUIC will display a message indicating whether the restore was successful or not. If the restore was successful, reboot the AUIC to activate the restored AUIC settings.

Kermit: Restore AUIC settings and database information via a Kermit file transfer. Ensure the AUIC backup file is available on the local computer, and then select this menu item to restore the AUIC data. The AUIC will prompt the user to select OK then start the Kermit file transfer. Characters may appear on the screen as the AUIC waits for the file transfer to begin. Start sending the backup file from the local computer using the **Kermit** file transfer protocol. When the file transfer has been completed, the AUIC will display a

message indicating whether the restore was successful or not. If the restore was successful, reboot the AUIC to activate the restored AUIC settings.

FTP Site: Restore AUIC settings and database information via an FTP server. Ensure the AUIC backup file has been stored on the FTP server, and the username and password for the FTP server are available. When this menu item is selected, the AUIC will display the Restore via FTP menu (Figure 68).

Restore via FTP	
Server	_____
Login	_____
Password	_____
Directory	_____
Filename	_____
<OK> <CANCEL>	

Figure 68: Restore via FTP Menu

Enter the FTP server address, the login name, password, directory where the backup file is stored, and the backup filename. When all the information has been entered press **enter** on **OK** to restore the AUIC data. When the file transfer has been completed, the AUIC will display a message indicating whether the restore was successful or not. If the restore was successful, reboot the AUIC to activate the restored AUIC settings.

11.4 Diagnostic Functions

The Diagnostics Menu allows the user to perform software upgrades and diagnostic functions on the AUIC (Diagnostic login only). This section will explain some of the diagnostic functions of the AUIC. See Section 11.1 for details on AUIC software upgrades and expansion card firmware upgrades.

Warning! Use caution when accessing diagnostic functions as configuration settings may be lost or software damage may occur.

To access the diagnostic functions, highlight the Diagnostics option from the 4200 CMS Main Menu and press enter. The Diagnostics menu will appear (Figure 69). Select a diagnostic function using the up and down arrow keys and press **enter**.

```
Diagnosics Menu
->Card Connect
  Upgrade AUIC Software Via ZModem
  Upgrade AUIC Software Via Kermit
  Upgrade AUIC Software Via FTP/HTTP Server
  Card Firmware Upgrade
  Unscheduled reports include unconfigured sensors: no
  Reboot
  Activate Full Version
  Back
```

Figure 69: Diagnostic Menu

Card Connect: Allows the user to access card information for troubleshooting and diagnostic purposes.

To access the cards installed in the 4200 CMS, highlight the **Card Connect** option and press **enter**. The Card Connect menu will appear (Figure 70).

```
Card Connect Menu
->1. LIC <no direct connection>
  2. AUIC (currently active)
  3. ACU/STU 0: Not Connected
  4. ACU/STU 0: Not Connected
  5. No Card Installed
  6. No Card Installed
  7. MTM Multi Tone Module - Standby Mode
  Back
```

Figure 70: Card Connect Menu

The numbers 1 - 6 on the left side refer to the slots on the 4200 CMS Backplane. Slots 1 and 2 are reserved for LIC and AUIC cards in that order. Slots 3 to 6 are reserved for the ACU card(s). Number 7 on the menu refers to the MTM. For further details please refer to the user manuals that correspond to the cards installed in the 4200 system.

Warning: Do not use the card connect menus to make configuration changes to any of the 4200 modules. Configuration settings may be lost if changes are made through these menus.

Unscheduled reports include unconfigured sensors: Press **enter** to toggle between **yes** and **no**. When no is selected, sensor alarm reports will only be sent if the sensor code in alarm is found in the sensor database. When yes is selected all sensor alarms will be reported.

Reboot: Performs a soft reboot of the AUIC.

Activate Full Version: Select this item to activate the “Plus” version of the AUIC. Contact Norscan for upgrade details and pricing.

12. Troubleshooting

This section will assist in diagnosing any problems relating to the 4200 CMS chassis.

12.1 Power related problems.

- Verify proper connection of -48 V dc and ground on TB1 - 1 and 2
- Verify with a voltage meter that the -48 V dc is present across TB1 - 1 and 2
- Verify that the Office Equipment battery supply or AC adapter supply is present
- With the power to the 4200 CMS chassis **off**, make sure that all cards are seated properly in 4200 CMS chassis

12.2 CMS not booting up.

- Check for any activity on the LCD display of the 4200 CMS
- Verify with a voltage meter that the -48 V dc is present at TB1 - 1 and 2
- With the power to the 4200 CMS chassis **off**, make sure that all cards are seated properly in the 4200 CMS chassis

12.3 Incorrect slot information.

- With the power to the 4200 CMS chassis **off**, make sure that all cards are seated properly in 4200 CMS chassis
- Verify that the physical slot location of the installed card corresponds with the slot designation on the LCD display of the 4200 CMS

12.4 Modem communication problems.

- Verify that the phone Tip and Ring lines on TB1 - 11 and 12 are connected
- Verify that the phone line is working – dial tone is present
- Verify that the correct phone number is being used
- Verify that the proper communication protocol (ANSI or VT100) is being used
- Try connecting to the 4200 CMS at a lower baud rate.

- If the carrier signal is dropping, or if the modem frequently gives a **No Carrier** message, try a different current limiting setting on the LIC (Figure 71). *Default should be set to 150 ohms.*

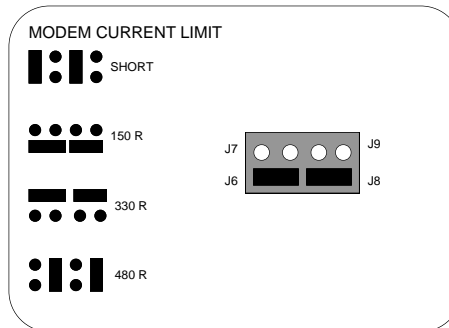


Figure 71: LIC Current Limit Jumper Setting

12.5 Serial communication problems.

- Verify that the serial cable connection is secure
- Verify that the proper serial cable is being used (straight through only, **not** a Null cable)
- Verify that the communication port and software are working properly on your personal computer (PC)
- Verify that the proper communication protocol is being used. (Handshaking or flow control set to **none**, no parity, 8 data bits, 1 stop bit)

12.6 Not sending modem reports

- Verify that the phone Tip and Ring lines on TB1 - 11 and 12 are connected
- Verify that the phone line is working – dial tone is present
- Verify that the correct phone number is being used
- Verify that Alarm processing is set to on
- Verify that alarm targets have been set up properly.

Appendix A – SNMP Reference

1. Setting up the 4200 CMS for SNMP

- 1.1 Configure TCP/IP networking. Refer to Section 5.2 Initial Network Configuration for detailed instructions.
- 1.2 In the System Configuration menu of the 4200 CMS, setup the SNMP read-only and read-write community strings. If these are left blank the defaults “public” and “system” will be used.
- 1.3 Acquire the Management Information Base (MIB) files NORSCAN-GLOBAL-REG.txt and NORSCAN-CMS-MIB.txt. These files can be obtained from the 4200 AUIC’s built-in web server. Using a web browser, enter the IP address of the 4200 and select the MIB files to download.
- 1.4 Install the MIBs into your network management software. Refer to the documentation that came with your network management software to do this.

2. Quick Tour of the MIBs

This section describes the overall structure of information available from the 4200 CMS through SNMP. Detailed descriptions for every object in the MIB can be found in the object description field of the MIB. A MIB viewer can be used to browse the MIBs and view the MIB objects explained in this section.

2.1 MIB Objects

The topmost object that encapsulates all cable monitoring objects is *norscanCMSMIB*. *norscanCMSObjs* . *norscanCMSLineObjs* or just *norscanCMSLineObjs*.

norscanCMSLineObjs has members *lineCount* and *lineTable*. *lineCount* returns the number of lines that can be monitored (always 12 for the 4200 CMS), and *lineTable* contains objects for each line. Lines are numbered starting from “1”.

Drilling down into *lineTable* will reveal a host of different objects. Objects fall into one of several categories depending on their function, and each object is prefixed with the name of its category.

2.1.1 *lineXXX* – Generic line related objects. The most important one here is *lineDescription* that is a settable string for the user to identify the line.

2.1.2 *sheathXXX* – All objects relating to cathodic protection and sheath monitoring provided by 4200 ACU’s and CPC’s are in this category.

2.1.3 *sensorXXX* – Information about sensors is in this category. Note that this is a table with one row per sensor, so this is really a 2 dimensional table with “line” as the first index and “sensor code” as the second. The most important object in this category is *sensorDescription* that the user can use to help identify the location of sensors.

2.1.4 *toneXXX* – Objects relating to tone location are in this category. Most important are *toneState* for turning tone on and off and *toneFrequency* for selecting the frequency.

3. 4200 CMS Events

The 4200 AUIC supports standard SNMP events (such as start up, shutdown, etc) as well as 4 cable monitoring events. In addition to the objects listed, each event includes a unique ID.

3.1 sheathEventCableAlarm

The sheathEventCableAlarm event is triggered when the outside plant (OSP) line current (*sheathCurrent*) rises above the designated threshold (*sheathCableThreshold*) indicating the presence of a fault to ground. This event is transmitted every 10 minutes until the condition is corrected. The objects transmitted with this event are:

<i>lineDescription.x</i>	<i>The line description that was previously entered. Also implies line number.</i>
<i>sheathCurrent.x</i>	<i>The electrical current in microamps presently on the line.</i>
<i>sheathCableThreshold.x</i>	<i>The maximum allowable electrical current before an alarm situation exists.</i>

Where *x* is the line number in alarm.

3.2 sheathEventLineAlarm

The sheathEventLineAlarm event is triggered when the OSP line resistance deviates from its nominal initialized value. The event is associated with a particular STU indicating the specific branch where the problem has occurred. This event is transmitted every 10 minutes until the condition is corrected. The objects transmitted with this event are:

<i>lineDescription.x</i>	<i>The line description that was previously entered.</i>
--------------------------	--

	<i>Also implies line number.</i>
<i>sensorDescription.x.y</i>	<i>The sensor description that was previously entered. Also implies line number and sensor code.</i>
<i>sensorTestResistance.x.y</i>	<i>The electrical resistance of the branch under consideration.</i>
<i>sensorNominalResistance.x.y</i>	<i>The branch resistance when the line was first initialized.</i>
<i>sheathLineThreshold.x</i>	<i>The maximum allowable resistance change before an alarm situation exists.</i>

Where *x* is the line number and *y* is the sensor code in alarm.

3.3 sheathEventSensorCodeAlarm

The sheathEventSensorCodeAlarm event is triggered when a sensor has been activated due to moisture detection in a splice enclosure. This event is transmitted every 10 minutes until the condition is corrected. The objects transmitted with this event are:

<i>lineDescription.x</i>	<i>The line description that was previously entered. Also implies line number.</i>
<i>sensorDescription.x.y</i>	<i>The sensor description that was previously entered. Also implies line number and sensor code.</i>

Where *x* is the line number and *y* is the sensor code in alarm.

3.4 toneEventStateChange

The toneEventStateChange event is triggered when tone is turned on or off for any OSP line. This is a one shot event and does not repeat like the others. The objects transmitted with this event are:

<i>lineDescription.x</i>	<i>The line description that was previously entered. Also implies line number.</i>
<i>toneState.x</i>	<i>Indicates whether the tone is on or off.</i>

Where *x* is the line number in alarm.

Appendix B – Performing Plug-In Card (ACU and MTM) Firmware Upgrades Via Card Connect

To upgrade the firmware on a plug-in card (ACU or MTM) using the Card Connect method, connect to the 4200 CMS using a modem, serial, or Telnet connection (see section 6 4200 System Access). Log onto the 4200 with diagnostic access. Select the **diagnostic** option from the 4200 Cable Monitoring System Main Menu and press **enter**. Then select **card connect** from the diagnostic menu and press **enter**, the card connect menu will appear.

```
Card Connect Menu
->1. LIC <no direct connection>
  2. AUIC
  3. ACU/STU 0: Not Connected
  4. ACU/STU 0: Not Connected
  5. No Card Installed
  6. No Card Installed
  7. MTM Multi Tone Module - Standby Mode
  Back
```

Figure 1: Card Connect Menu

The card connect menu will show all the plug-in cards installed in the 4200 CMS and their corresponding slot number (Figure 1). Use the arrow keys to select the card to upgrade and press **enter**.

1. Alarm Circuit Unit (ACU) Upgrade

If an ACU is selected, the following menu will appear.

```
Cable Monitoring Card
<no description>
1. View Card Status
2. Setup Mode
3. Setup STUs
X.Exit
```

Figure 2: Cable Monitoring Card Menu

Press **2** for Setup Mode, the ACU Setup Mode menu will appear (Figure 3).

Warning: Do not use the card connect menus to make configuration changes to any of the 4200 modules. Configuration settings may be lost if changes are made through these menus.

```
ACU Setup Mode

ACU/STU #01039  Rev 3.02  Ver 3.01

0. Line Description ..... <no description>
1. Card Type ..... ACU/STU
2. ACU/STU ..... ON
3. ACU/STU line ..... 1 - Connected
4. Alarm Processing ..... ON
5. Alarm Delay ..... 5 Minute(s)
6. Audible Alarm ..... OFF
7. Sensor Baud/Line type .. 03 Baud/Normal
8. Line Alarm Threshold ... 400.00Ω
9. Cable Alarm Threshold .. 1.00mA
F. Upgrade Firmware
X. Exit
```

Figure 3: ACU Setup Mode

Note the firmware version number on the ACU Setup Mode screen. A list of current firmware versions is available on the Internet at www.norscan.com. If a newer firmware version has been released, contact Norscan to obtain the latest version.

To upgrade the ACU firmware, ensure the firmware file is available on the local computer. Press **F** to begin the upgrade process. A warning message will be displayed (Figure 4).

```
Upgrade Firmware Menu

Warning!
Card may become inoperable if proper procedure is not followed.
Please see readme files

Enter Password to Continue
```

Figure 4: Upgrade Firmware Menu

Enter **4200CMS** (case sensitive) when prompted for the upgrade password.

The screen will display the Card Connect menu and the ACU card will be in upgrade mode (Figure 5).


```
Card Connect Menu
1. LIC <no direct connection>
2. AUIC
->3. ACU Upgrade Mode Ver 1.0
4. ACU/STU 0: Not Connected
5. No Card Installed
6. No Card Installed
7. MTM Multi Tone Module - Standby Mode
Back
```

Figure 5: Card Connect Menu for ACU Upgrade

Use the arrow keys to select the ACU card that indicates Upgrade Mode and press **enter**. The ACU Upgrade Mode menu will be displayed (Figure 6).

```
4200ACU Upgrade Mode v1.0
1. Return to ACU mode
2. Upgrade ACU card
3. Reset Card using Watchdog Timer
4. Display Reset Conditions
5. Clear Reset Conditions
X. Exit
```

Figure 6: ACU Upgrade Mode Menu

Press **2** to upgrade the ACU card or press **1** to exit upgrade mode and return to normal ACU operation. If **Upgrade ACU Card** is selected, the 4200 CRC-Xmodem Upgrade Mode Menu will be displayed (Figure 7).

```
4200 CRC-XModem Upgrade Mode
1. Program all available modules
2. Program 2K only
3. Program 32K only
4. Program 512K only
5. Program External Ram
6. Erase all modules
x. Exit
```

Figure 7: 4200 CRC-Xmodem Upgrade Mode Menu

Select **1** to program all available modules. A prompt will appear to start your Xmodem-CRC transfer (Figure 8). Characters may appear on the screen as the ACU waits for the file transfer to begin.

```
4200 CRC-XModem Upgrade Mode

1. Program all available modules
2. Program 2K only
3. Program 32K only
4. Program 512K only
5. Program External Ram
6. Erase all modules
x. Exit

Start your XModem-CRC transfer now.
```

Figure 8: 4200 CRC-Xmodem Upgrade Mode Menu With XModem Transfer

Start sending the latest ACU firmware file (acu.bin) from the local computer using the **Xmodem-CRC** file transfer protocol. See Figure 9 for the Tera Term™ Send File Menu Option.

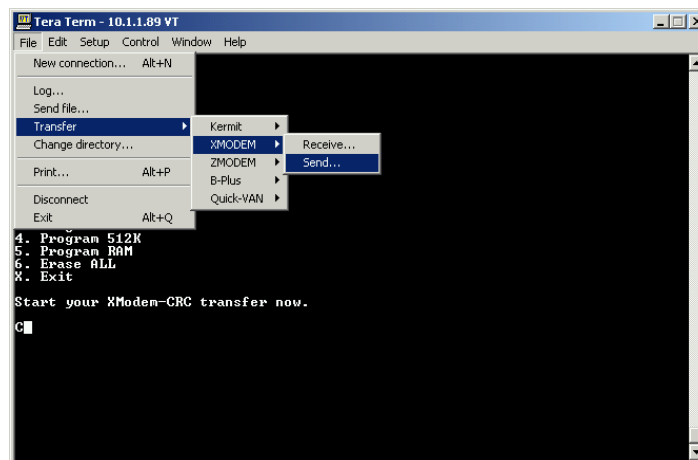


Figure 9: TeraTerm Send File Menu Option

Once the file transfer is complete the ACU will indicate that the card has been programmed. The 4200 CRC-Xmodem Upgrade Mode Menu will reappear (Figure 7).

Press **x** to return to the ACU Upgrade Mode menu (Figure 6), then press **1** to exit upgrade mode and Return to ACU Mode operation.

To ensure the card upgraded properly check the firmware version by selecting the ACU and entering Setup Mode by pressing **2**. The firmware version should now be the most recent version.

2. Multi Tone Module (MTM) Upgrade

If a Multi Tone Module (MTM) is selected for upgrade, the following menu will appear.

```
Multi Tone Module

No Line Selected
Tone 1: 577 Hz

Voltage: 000 V
Current: Low
Time:

1. Tone OFF - Activate Tone
2. Select Line & Apply Tone
3. Select Tone Frequency
4. Security Options
Setup Mode
X. Exit
```

Figure 10: MTM Menu

Press **5** for Setup Mode, the Multi Tone Module Setup Menu will appear (Figure 11).

Warning: Do not use the card connect menus to make configuration changes to any of the 4200 modules. Configuration settings may be lost if changes are made through these menus.

```
Multi Tone Module Setup Mode

MTM #00529 Rev 2.01 Ver 3.01

1. Program Line Descriptions
2. Program Tone Settings
3. Auto Shut-Off: 10 hours
4. Upgrade Firmware
X. Exit
```

Figure 11: MTM Setup Mode

Note the firmware version number on the Multi Tone Module Setup Mode screen. A list of current firmware versions is available on the Internet at www.norscan.com. If a newer firmware version has been released, contact Norscan to obtain the latest version.

To upgrade the MTM firmware, ensure the firmware file is available on the local computer. Press **4** to begin the upgrade process. A warning message will be displayed (Figure 12).

```
Upgrade Firmware Menu

Warning!
Card may become inoperable if proper procedure is not followed.
Please see readme files

Enter Password to Continue
```

Figure 12: Upgrade Firmware Menu

Enter **4200CMS** (case sensitive) when prompted for the upgrade password.

The screen will display the Card Connect Menu and the MTM card will be in upgrade mode (Figure 13).

```
Card Connect Menu

1. LIC <no direct connection>
2. AUIC
3. ACU/STU 0: Not Connected
4. ACU/STU 0: Not Connected
5. No Card Installed
6. No Card Installed
->7. MTM Upgrade Mode Ver 1.01
Back
```

Figure 13: Card Connect Menu for MTM Upgrade

Use the arrow keys to select the MTM card and press **enter**. The MTM Upgrade Mode menu will be displayed (Figure 14).

```
MTM Upgrade Mode 1.01

1. Resume Normal Operation
2. Upgrade
3. Reset
4. Display Resets
5. Clear Resets
X. Exit
```

Figure 14: MTM Upgrade Mode Menu

Press **2** to upgrade the MTM card or press **1** to exit upgrade mode and return to normal operation. If **Upgrade** is selected, the 4200 CRC-Xmodem Upgrade Mode Menu will be displayed (Figure 15).

```
4200 CRC-XModem Upgrade Mode

1. Program all
2. Program 2K
3. Program 32K
4. Program 512K
5. Program Ram
6. Erase ALL
x. Exit
```

Figure 15: 4200 CRC-Xmodem Upgrade Mode Menu

Select **1** to program all available modules. A prompt will appear to start your Xmodem-CRC transfer (Figure 16). Characters may appear on the screen as the MTM waits for the file transfer to begin.

```
4200 CRC-XModem Upgrade Mode

1. Program all
2. Program 2K
3. Program 32K
4. Program 512K
5. Program Ram
6. Erase ALL
x. Exit

Start your XModem-CRC transfer now.
```

Figure 16: 4200 CRC-Xmodem Upgrade Mode Menu With XModem Transfer

Start sending the latest MTM firmware file (mtm.bin) from the local computer using the **Xmodem-CRC** file transfer protocol (Figure 9).

Once the file transfer is complete the MTM will indicate that the card has been programmed. The 4200 CRC-Xmodem Upgrade Mode Menu will reappear (Figure 15).

Press **x** to return to the MTM Upgrade Mode menu (Figure 14), then press **1** to exit upgrade mode and return to normal operation.

To ensure the card upgraded properly check the firmware version by selecting the MTM and entering Setup Mode by pressing **5**. The firmware version should now be the most recent version.

Abbreviations and Special Terms

Abbreviations

ACU	Alarm Circuit Unit –	4200 system card used for armor monitoring and sensor decoding.
AUIC	Advanced User Interface Card –	4200 system card used to provide communication between the user and the 4200 CMS. Includes Ethernet connectivity and database features.
CMS	Cable Management System	
CO	Central Office	
CPC	Cathodic Protection Card –	4200 system card used for cathodically protecting outer armor of a double armored cable.
CPM	Cathodic Protection Monitor –	Termination sensor for Cathodic Protection Card.
CPS	Cathodic Protection System	
DSP	Digital Signal Processing	
I _{nom}	Nominal Loop Current	
IVF	Induced Voltage Filter –	A tuned filter that will ground specific AC voltage frequencies.
IVR	Interactive Voice Response	
IRIS	Infrared Intrusion Sensor –	Security sensor that detects changes in infrared light.
LED	Light Emitting Diode	
LIC	Line Interface Card –	4200 system card that provides over-voltage protection and noise filtering to all input / output lines on the 4200 CMS.
LPU	Line Protection Unit –	An indoor rated protection device that provides a low impedance path to ground for high transient voltages.
LRFL	Long Range Fault Locator –	portable measurement system used to locate resistive sheath faults.
LTU-0K	Line Termination Unit –	Provides a 0 KΩ impedance termination for tone signals, used on single termination networks (no branches).
LTU-FC	Line Termination Unit –	Termination for tone signals on a multiple termination network.
MDT	Moisture Detection Tape –	Water sensing tape that can be installed in splice enclosures with an SSU to detect the presence of moisture.
MTM	Multi Tone Module –	4200 system module that provides tone signals for cable locating.
OSP	Outside Plant	
PC	Personal Computer	
PSU	Power Supply Unit	
SMS	Short Message Service	
SPU	Station Protection Unit	
SSU	Splice Sensor Unit –	sensor typically used to detect moisture in a splice enclosure.
STU	Sequence Termination Unit –	Termination sensor for STU mode armor monitoring.
TSU	Termination Sensor Unit –	Termination sensor for TSU mode armor monitoring.

UIC User Interface Card – 4200 system card that provides communication between the user and the 4200 CMS.

Special Terms

Address	The TCP/IP address assigned to the 4200 AUIC to uniquely identify it on a network using the TCP/IP protocol. Set in the Comms Configuration Menu.
Cable Armor or Sheath	Metallic protective layer of a Fiber Optic Cable
Cable Alarm	The result of a faulted to ground cable armor
DNS	The address of a Domain Name Service server that will translate domain names into IP addresses. This server is required if an alphabetic email server name is used. Set in the Comms Configuration Menu.
Field Equipment	Devices generally placed outside of the office such as SSUs, MDT, etc.
Gateway	The address of the computer that will route data from the 4200 CMS to the outside network. Set in the Comms Configuration Menu.
Line Alarm	The result of an “open or going open” detection circuit
Netmask	This mask is used to specify which part of the address is the network number part, and which is the host part. Set in the Comms Configuration Menu.
NTP	Network Time Protocol used to sync Date & Time with a dedicated NTP Server for accurate date and time readings.
Norcomm™	Norscan Terminal Communication Software
Office Equipment	Equipment placed in a Central Office, Head End, Repeater or Regeneration Station, Mini Hub site
Protection Equipment	Devices used to protect personnel, cable and equipment from high voltage surges and induced voltages
Sensor Alarm	The result of a sensor unit being triggered by water entering the splice enclosure
Test Equipment	Equipment used during and after installation

If you need further assistance please contact

Norscan Instruments Ltd.
PH: (204) 233-9138

email: support@norscan.com

web: <http://www.norscan.com>